


**2002**

# **TECHNICAL MANUAL MTB COMPONENTS**

**ENGLISH**

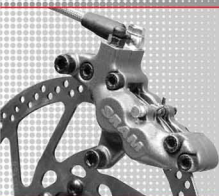



This Technical Manual is  
intended for bicycle factories  
and qualified bicycles dealers  
only!

© Copyright SRAM Corporation 2001

Publ. No. 8022 E

Information may be enhanced  
without prior notice.

**Released August 2001**

SRAM Technical Documentation,  
Schweinfurt/Germany

EXA-Drive is a trademark of Campagnolo S.R.L., Italia.

Teflon is a trademark of E.I. DuPont de Nemours and Co.

Griton is a trademark of EMS-Chemie AG, Switzerland.

3M Super 77 is a trademark of Minnesota Mining and Manufacturing Company, U.S.A.

Dacromet is a tradename of Metal Coatings International, U.S.A.

Manitou is a trademark of Answer Products Inc., U.S.A.

Shimano, HG, IG, Rapid Rise are trademarks of Shimano Inc., Japan.



### REAR DERAILLEURS



X.0 / 9.0SL / 9.0 / 7.0 / 5.0

3

4.0 / 3.0

7

### FRONT DERAILLEURS



3.0

11

### TWIST SHIFTERS

X.0 / 9.0SL / 9.0 / 7.0 / Rocket / Attack

15



5.0 Royale / 5.0 / Verio / Centera

19

4.0 / 3.0 / MRX Plus / MRX

22

### TRIGGER SHIFTERS



9.0 / Gemini Pro

24

### INTEGRATED BRAKE SHIFTERS



3.0IBS / MRXIBS

26



### CASSETTES

28



### POWER CHAINS

30

### BRAKES



9.0 Disc Brakes

32



9.0 / 7.0 / 5.0 Linear Pull Brakes

38



9.0 / 7.0 / 5.0 Brake Levers

40



Two-Axis Brake Lever

42



### SMARTBAR

45



### SEALS Nightcrawler / Brakecrawler

57

### SUPPORT



Distributors

62

Who to call / SRAM 2 year warranty / Spare Parts

64



# X.0 / 9.0SL / 9.0 / 7.0 / 5.0 • REAR DERAILLEURS • ESP™

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS




1:1

X  
•  
0  
  
9  
•  
0  
S  
L  
  
9  
•  
0  
  
7  
•  
0  
  
5  
•  
0

|                              | X.0                         | <b>NEW</b>                | 9.0SL      | 9.0                 | 7.0                   | 5.0                    |
|------------------------------|-----------------------------|---------------------------|------------|---------------------|-----------------------|------------------------|
| <b>Part No.</b>              | —                           | —                         | —          | —                   | —                     | —                      |
| <b>Speeds</b>                | 9/8                         | 9/8                       | 9/8        | 9/8                 | 9/8                   | 8                      |
| <b>Shifter Compatibility</b> | SRAM X.0/9.0SL/9.0/7.0/5.0  |                           |            | ←                   | ←                     | ←                      |
| <b>Chain Capacity</b>        | <b>Total</b>                | 37T 45T                   | 37T 45T    | 45T                 | 45T                   | 45T                    |
|                              | <b>Cage Length</b>          | Short Long                | Short Long | Long                | Long                  | Long                   |
|                              | <b>Max Sprocket</b>         | 34T                       | 34T        | 34T                 | 34T                   | 34T                    |
|                              | <b>Min Sprocket</b>         | 11T                       | 11T        | 11T                 | 11T                   | 11T                    |
|                              | <b>Front Difference</b>     | 22T                       | 22T        | 22T                 | 22T                   | 22T                    |
| <b>Design</b>                | <b>Parallelogram Spring</b> | Titanium                  |            | Steel, reinforced   | Steel                 | Steel                  |
|                              | <b>Pulleys</b>              | Cartr. bearing, stainless |            | Cartridge bearing   | Bushing, hardened     | Bushing, hardened      |
|                              | <b>Cogsets &amp; Chains</b> | SRAM/IG & HG 9/8spd       |            | SRAM/IG & HG 9/8spd | SRAM/IG & HG 9/8spd   | SRAM/IG & HG 8spd      |
|                              | <b>Direct Mount</b>         | Yes                       |            | Yes                 | Yes                   | Yes                    |
|                              | <b>Weight</b>               | 200 g                     |            | 242 g               | 252 g                 | 310 g                  |
|                              | <b>Upper Knuckle</b>        | Forged Aluminum / Anod.   |            | Grilon Composite    | Grilon Composite      | Grilon Composite       |
|                              | <b>Outer Link</b>           | Forged Magnesium          |            | Forged Aluminum     | Forged AL / Anodized  | Alu die-cast / Painted |
| <b>Design</b>                | <b>Inner Link</b>           | Aluminum / Anodized       |            | Forged Aluminum     | Steel / E-coat        | Steel / E-coat         |
|                              | <b>Outer Cage</b>           | Aluminum / Anodized       |            | Forged Aluminum     | Stamped AL / Anodized | Stamped AL / Anodized  |
|                              | <b>Inner Cage</b>           | Aluminum / Anodized       |            | Forged Aluminum     | Grilon Composite      | Grilon Composite       |
|                              | <b>Hanger Bolt</b>          | Aluminum / Anodized       |            | Aluminum / Anodized | Aluminum / Anodized   | Steel                  |

### DERAILLEUR ANATOMY

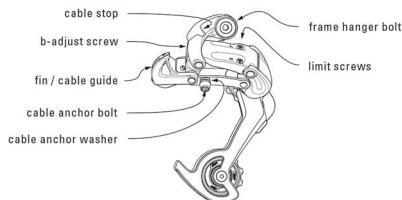

### COMPATIBILITY

|                   |                                                                                  |
|-------------------|----------------------------------------------------------------------------------|
| <b>Shifters</b>   | SRAM® X.0, 9.0SL, 9.0, 7.0, 5.0, 3.0IBS shifters ONLY                            |
| <b>Cogsets</b>    | 11-30, 11-32, 12-32, 11-34, 12-34                                                |
| <b>Chains</b>     | SRAM Power Chain and Shimano® HG & IG                                            |
| <b>Chainrings</b> | 22-32-42/44, 24-34-46, 26-36-46/48                                               |
| <b>Cable</b>      | 1.1 or 1.2 mm high quality cables                                                |
| <b>Housing</b>    | 4 or 5 mm compressionless cable housing with end cap maximum diameter of 5.8 mm. |

### FRAME DIMENSIONS


(see figure 1 and 2)

- For optimal ESP rear derailleur performance, the recommended rear derailleur hanger length (L) should be 28 – 30 mm.


- For a given L, use the chart below to determine other ESP rear derailleur hanger specifications.

| L  | X        | A         | R1      | R2          | T     |
|----|----------|-----------|---------|-------------|-------|
| 28 | 6 – 10   | 25° – 30° | 8.5 max | 11.5 – 13.5 | 7 – 8 |
| 30 | 7.5 – 10 | 25° – 30° | 8.5 max | 11.5 – 13.5 | 7 – 8 |

1

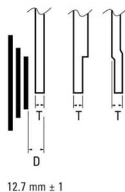


2

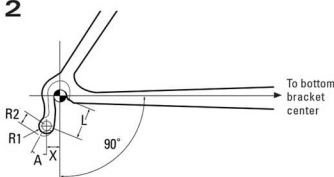

# X.0 / 9.0SL / 9.0 / 7.0 / 5.0 · REAR DERAILLEURS · ESP™ ASSEMBLY

1

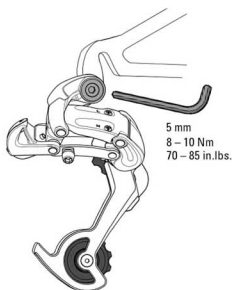

## ASSEMBLY

### Advice:

**Check the rear derailleur hanger alignment. A bent rear derailleur hanger will result in inaccurate index shifting. Outboard side impacts are the most common causes of this type of damage.**

- Attach the rear derailleur to the frame's rear derailleur hanger using a 5 mm hex head wrench (**Fig. 1**).
- Check that the b-adjust washer tab is clear of the rear derailleur dropout tab (**Fig. 2**).
- Tighten the 5 mm hex hanger bolt to 8 - 10 Nm (70 - 85 in.lbs.).

## CHAIN LENGTH

A properly measured chain will prevent accidentally shifting to the largest chain ring and cog combination. This type of accidental shifting may cause harmful binding or seizure of the chain and potentially cause severe damage.

- Bypassing the rear derailleur, run the chain around the largest cog/large chainring combination (**Fig. 3**).  
– For rear suspension frames, position the rear suspension for the greatest chain length required.
- Add 2 LINKS or 1 link + Power Link to this length for proper chain length.

## LIMIT SCREWS ADJUSTMENT

- View the rear derailleur and pulleys from behind the rear of the bicycle (**Fig. 4**).
- Turn the limit screw marked 'H' on the outer link of the derailleur to align the upper guide pulley center with the outboard edge of the smallest cog - clockwise moves the guide pulley inboard towards the wheel.
- While turning the crank, push the rear derailleur towards the larger cogs by hand.
- Align the upper guide pulley under the largest cog, center to center, by turning the limit screw marked 'L' on the outer link - clockwise moves the guide pulley outboard away from the spokes.

## CHAIN GAP ADJUSTMENT

Chain gap is the distance between the upper guide pulley and the cog the chain is riding on. Optimal chain gap is small enough to allow quick, efficient shifts to and from any cog, but large enough to allow smooth shifts to and from the largest cog.

- Shift chain to the small chain ring.
- While turning the crank, push the rear derailleur inboard by hand to the largest cog.
- Hold the derailleur in this position while making the following adjustment.

- Use a 2,5/3 mm hex wrench, turn the b-adjust screw until the chain gap equals approximately 6 mm ( $1/4$ "") from tip of the cog to tip of upper guide pulley (**Fig. 5**).

- Turn the b-adjust screw clockwise to increase the chain gap.
- Turn the b-adjust screw counterclockwise to decrease the chain gap.


### Advice:

- **Bicycles equipped with an 11-28 cassette may require you to set the chain gap at the smallest cog. This is due to the shallow angle of the cassette in relation to the steeper movement of the 9spd rear derailleur.**
- **It is best to measure the rear piece of cable housing between the frame and derailleur after the chain gap is determined. See figure and chart for recommended lengths.**
- **Do not use the b-adjust screw to adjust the rear derailleur to act as a chain-tensioning device or to prevent chain suck. This increases the chain gap causing poor shifting performance.**


## INDEX SHIFTING ADJUSTMENT

- Check that the chain and the rear derailleur are in the smallest cog position.
- Measure and cut the rear piece of cable housing. Make sure that it is not too short or long (**see figure and chart**).
- Rotate the rear shifter until the largest number and gear indication tab/dash line up.
- Turn the rear shifter barrel adjust clockwise fully into the shifter, then turn counterclockwise 1 full turn.
- Feed the rear shifter cable through the rear derailleur cable housing, stops and cable guides.
- Feed the rear derailleur cable through the rear derailleur-housing stop and through the cable guide on the fin.
- Pull the cable tight and position it under the cable anchor washer (**Fig. 6**).
- Tighten the 5 mm hex cable anchor bolt to 4 - 5 Nm (35 - 45 in.lbs.).  
– Be careful not to crush or deform the cable.
- Rapidly shift the chain and derailleur up and down the cassette several times. If the cable slips repeat the two former steps.
- Shift the chain to the smallest cog.
- While pedaling, move the shifter up one detent.  
– If the chain hesitates or does not shift to the second cog, increase the cable tension by turning the shifter barrel adjuster counterclockwise.
- If the chain shifts beyond the second cog, decrease the cable tension by turning the shifter barrel adjuster clockwise.


2

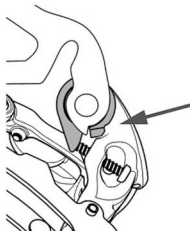

3

 

4

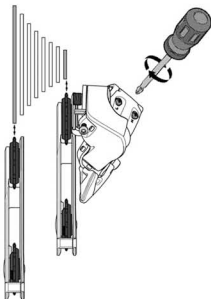


# X.0 / 9.0SL / 9.0 / 7.0 / 5.0 • REAR DERAILLEURS • ESP™

## ASSEMBLY / MAINTENANCE



1:1

5

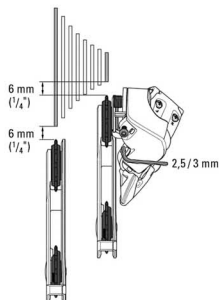


- Repeat the two former steps until shifting and cable tension is accurate.
- While turning the crank, shift the chain up and down the cassette and chain rings several times to ensure that your derailleur is indexing smoothly.




### MAINTENANCE

- Do not use solvents or corrosive materials to clean the components.
- Lubricate the shifting joints regularly (Fig. 7).
- Grease any cable guides (e.g. beneath the bottom bracket).

### CHART / LENGTH OF CABLE HOUSINGS

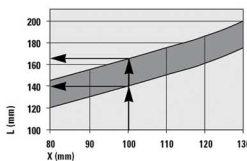


Example: Distance X = 100 mm → cable housing length L = 140 – 165 mm.

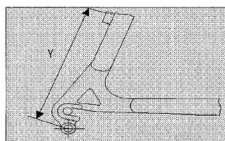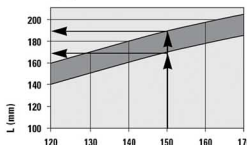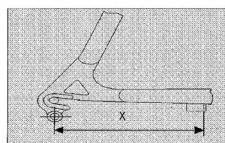


### Caution:

It is imperative to respect the values for the correct length of cable housing.

6

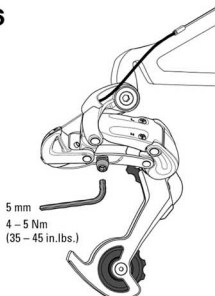

7

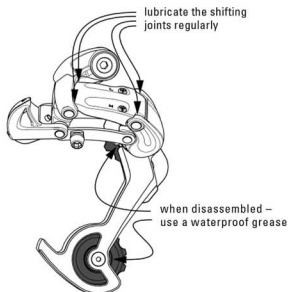

### TROUBLESHOOTING

| Problem                                                                                                                    | Cause                                                     | Remedy                                                                                |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|---------------------------------------------------------------------------------------|
| Chain jumps from smallest sprocket to frame dropout.                                                                       | High gear limit screw is not adjusted properly.           | Turn in screw H until the guide pulley is aligned with the smallest sprocket.         |
| Difficult or impossible to shift chain onto smallest sprocket.                                                             | High gear limit screw is not adjusted properly.           | Unscrew screw H until the guide pulley is aligned with the smallest sprocket.         |
| Chain jumps over largest sprocket and falls between the spokes and largest sprocket or inner cage plate scrapes on spokes. | Low gear limit screw is not adjusted properly.            | Turn in screw L until the guide pulley is aligned with the smallest sprocket.         |
| Delayed shifting.                                                                                                          | Rear derailleur or derailleur hanger is bent.             | Straighten or replace.                                                                |
| Rough shifting behavior.                                                                                                   | Clearance between guide pulley / sprocket is too large.   | Adjust b-adjust screw by rotating counterclockwise.                                   |
|                                                                                                                            | Clearance between guide pulley / sprocket is too small.   | Adjust b-adjust screw by rotating clockwise.                                          |
| Chain jumps two gears on small sprocket                                                                                    | Shift cable insufficiently tensioned.                     | Turn barrel adjuster on the shifter counterclockwise.                                 |
| Delayed shifting onto larger sprocket                                                                                      | Shift cable insufficiently tensioned.                     | Turn barrel adjuster on the shifter counterclockwise.                                 |
| Delayed shifting onto smaller sprocket                                                                                     | Shift cable is too tight.                                 | Turn barrel adjuster on the shifter clockwise.                                        |
|                                                                                                                            | Excessive cable friction, pinched or poorly routed cable. | Lubricate or replace cable and housing. Check for excessive bending of cable housing. |



# 4.0 / 3.0 • REAR DERAILLEURS • ESP™


## TECHNICAL DATA / ASSEMBLY REQUIREMENTS



- 1:1 Actuation Ratio
- Larger Pivots, Links And Cages
- Expanded Gear Range
- New Appearance
- Slant Parallelgram Design
- Outward Facing Limit Screws

|                              | 4.0                                          | 3.0                   |
|------------------------------|----------------------------------------------|-----------------------|
| <b>Part No.</b>              | —                                            | —                     |
| <b>Speeds</b>                | 8/7                                          | 8/7                   |
| <b>Shifter Compatibility</b> | SRAM 9.0SL / 9.0 / 7.0 / 5.0 / 4.0 / 3.0 IBS |                       |
| <b>Total</b>                 | 45T                                          | 45T                   |
| <b>Cage Length</b>           | Long                                         | Long                  |
| <b>Max Sprocket</b>          | 34T                                          | 34T                   |
| <b>Min Sprocket</b>          | 11T                                          | 11T                   |
| <b>Front Difference</b>      | 22T                                          | 22T                   |
| <b>Spring Enhancement</b>    | Yes                                          | Yes                   |
| <b>Pulleys</b>               | Bushing (replaceable)                        | Bushing               |
| <b>Cogsets &amp; Chains</b>  | SRAM / IG & HG 8/7spd                        | SRAM / IG & HG 8/7spd |
| <b>Direct Mount</b>          | Yes                                          | Yes                   |
| <b>Weight</b>                | 242 g                                        | 239 g                 |
| <b>Knuckles</b>              | Grilon Composite                             | Grilon Composite      |
| <b>Outer Link</b>            | Grilon Composite                             | Grilon Composite      |
| <b>Inner Link</b>            | Steel / Zinc Coat                            | Steel / Zinc Coat     |
| <b>Outer Cage</b>            | Grilon Composite                             | Grilon Composite      |
| <b>Inner Cage</b>            | Grilon Composite                             | Grilon Composite      |
| <b>Hanger Bolt</b>           | Steel                                        | Steel                 |

### DERAILLEUR ANATOMY

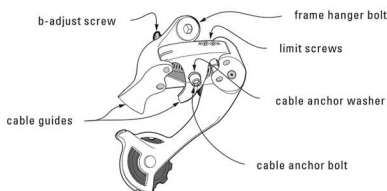

### COMPATIBILITY

|                   |                                                                                  |
|-------------------|----------------------------------------------------------------------------------|
| <b>Shifters</b>   | SRAM 7 & 8spd ESP cable pull shifters only                                       |
| <b>Cogsets</b>    | Min. 11T, Max. 34T                                                               |
| <b>Chains</b>     | SRAM Power Chain and Shimano® HG & IG                                            |
| <b>Chainrings</b> | 22-32-42/44, 24-34-46, 26-36-46/48                                               |
| <b>Cable</b>      | 1.1 or 1.2 mm high quality cables                                                |
| <b>Housing</b>    | 4 or 5 mm compressionless cable housing with end cap maximum diameter of 5.8 mm. |


### FRAME DIMENSIONS

(see figure 1 and 2)


- For optimal ESP rear derailleur performance, the recommended rear derailleur hanger length (L) should be 28 – 30 mm.
- For a given L, use the chart below to determine other ESP rear derailleur hanger specifications.

| L  | X      | A       | R1      | R2        | T   |
|----|--------|---------|---------|-----------|-----|
| 28 | 6–10   | 25°–30° | 8.5 max | 11.5–13.5 | 7–8 |
| 30 | 7.5–10 | 25°–30° | 8.5 max | 11.5–13.5 | 7–8 |

1

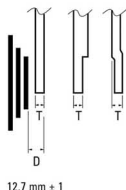


2

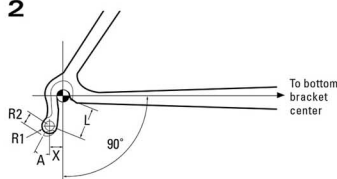


# 4.0 / 3.0 · REAR DERAILLEURS · ESP™ ASSEMBLY


1

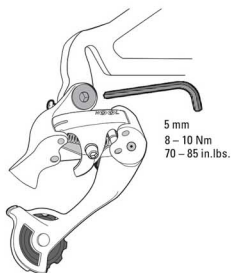


2

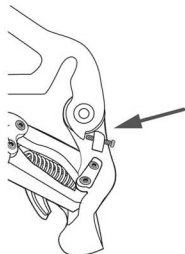

3

 

4

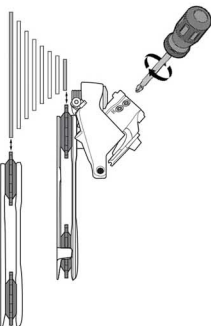

## ASSEMBLY

### Advice:

**Check the rear derailleur hanger alignment. A bent rear derailleur hanger will result in inaccurate index shifting. Outboard side impacts are the most common causes of this type of damage.**

- Attach the rear derailleur to the frame's rear derailleur hanger using a 5 mm hex head wrench (**Fig. 1**).
- Check that the b-adjust screw is clear of the rear derailleur dropout tab (**Fig. 2**).
- Tighten the 5 mm hex hanger bolt to 8 – 10 Nm (70 – 85 in. lbs.).

## CHAIN LENGTH

A properly measured chain will prevent accidentally shifting to the largest chain ring and cog combination. This type of accidental shifting may cause harmful binding or seizure of the chain and potentially cause severe damage.

- Bypassing the rear derailleur, run the chain around the largest cog/large chainring combination (**Fig. 3**).  
– For rear suspension frames, position the rear suspension for the greatest chain length required.
- Add 2 LINKS or 1 link + Power Link to this length for proper chain length.

## LIMIT SCREWS ADJUSTMENT

- View the rear derailleur and pulleys from behind the rear of the bicycle (**Fig. 4**).
- Using a small screwdriver, turn the limit screw marked 'H' on the outer link of the derailleur to align the upper guide pulley center with the outboard edge of the smallest cog – clockwise moves the guide pulley inboard towards the wheel.
- While turning the crank, push the rear derailleur towards the larger cogs by hand.
- Align the upper guide pulley under the largest cog, center to center, by turning the limit screw marked 'L' on the outer link – clockwise moves the guide pulley outboard away from the spokes.

## CHAIN GAP ADJUSTMENT

Chain gap is the distance between the upper guide pulley and the cog the chain is riding on. Optimal chain gap is small enough to allow quick, efficient shifts to and from any cog, but large enough to allow smooth shifts to and from the largest cog.

- Shift chain to the small chain ring.
- While turning the crank, push the rear derailleur inboard by hand to the largest cog.
- Hold the derailleur in this position while making the following adjustment:

- Use a 3 mm hex wrench, turn the b-adjust screw until the chain gap equals approximately 6 mm ( $1/4$ " ) from tip of the cog to tip of upper guide pulley (**Fig. 5**).

- Turn the b-adjust screw clockwise to increase the chain gap.
- Turn the b-adjust screw counterclockwise to decrease the chain gap.

### Advice:

- **Bicycles equipped with an 11–28 or 14–28 cassette may require you to set the chain gap at the smallest cog. This is due to the shallow angle of the cassette in relation to the steeper movement of the rear derailleur.**
- **Precision index shifting may require small changes of the b-adjustment while setting the proper cable tension.**
- **Do not use the b-adjust screw to adjust the rear derailleur to act as a chain-tensioning device or to prevent chain suck. This increases the chain gap causing poor shifting performance.**

## INDEX SHIFTING ADJUSTMENT


- Check that the chain and the rear derailleur are in the smallest cog position.
- Measure and cut the rear piece of cable housing. Make sure that it is not too short or long.
- Rotate the rear shifter until the largest number and gear indication tab/dash line up.
- Turn the rear shifter barrel adjust clockwise fully into the shifter, then turn counterclockwise 1 full turn.
- Feed the rear shifter cable through the rear derailleur cable housing, stops and cable guides.
- Thread the rear derailleur cable through the rear derailleur-housing stop and through the cable guide on the fin (**Fig. 6**).
- Pull the cable tight and position it under the cable anchor washer (**Fig. 6**).
- Tighten the 5 mm hex cable anchor bolt to 4 – 5 Nm (35 – 45 in. lbs.)  
– Be careful not to crush or deform the cable.
- Rapidly shift the chain and derailleur up and down the cassette several times. If the cable slips repeat the two former steps.
- Shift the chain to the smallest cog.
- While pedaling, move the shifter up one detent.  
– If the chain hesitates or does not shift to the second cog, increase the cable tension by turning the shifter barrel adjuster counterclockwise.
- If the chain shifts beyond the second cog, decrease the cable tension by turning the shifter barrel adjuster clockwise.

# 4.0 / 3.0 • REAR DERAILLEURS • ESP™

## ASSEMBLY / MAINTENANCE



5

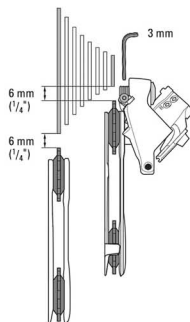


- Repeat the two former steps until shifting and cable tension is accurate.
- While turning the crank, shift the chain up and down the cassette and chain rings several times to ensure that your derailleur is indexing smoothly.


### MAINTENANCE

- Do not use solvents or corrosive materials to clean the components.
- Lubricate the shifting joints regularly (Fig. 7).
- Grease any cable guides (e.g. beneath the bottom bracket).

6

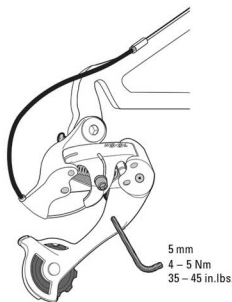

7

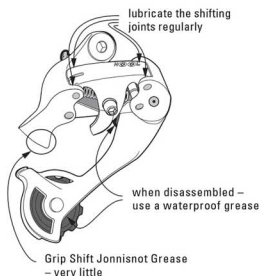

### TROUBLESHOOTING

| Problem                                                                                                                    | Cause                                                     | Remedy                                                                                |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|---------------------------------------------------------------------------------------|
| Chain jumps from smallest sprocket to frame dropout.                                                                       | High gear limit screw is not adjusted properly.           | Turn in screw H until the guide pulley is aligned with the smallest sprocket.         |
| Difficult or impossible to shift chain onto smallest sprocket.                                                             | High gear limit screw is not adjusted properly.           | Unscrew screw H until the guide pulley is aligned with the smallest sprocket.         |
| Chain jumps over largest sprocket and falls between the spokes and largest sprocket or inner cage plate scrapes on spokes. | Low gear limit screw is not adjusted properly.            | Turn in screw L until the guide pulley is aligned with the largest sprocket.          |
| Delayed shifting.                                                                                                          | Rear derailleur or derailleur hanger is bent.             | Straighten or replace.                                                                |
| Rough shifting behavior.                                                                                                   | Clearance between guide pulley / sprocket is too large.   | Adjust b-adjust screw by rotating counterclockwise.                                   |
| Chain jumps two gears on small sprocket                                                                                    | Clearance between guide pulley / sprocket is too small.   | Adjust b-adjust screw by rotating clockwise.                                          |
| Delayed shifting onto larger sprocket                                                                                      | Shift cable insufficiently tensioned.                     | Turn barrel adjuster on the shifter counterclockwise.                                 |
| Delayed shifting onto smaller sprocket                                                                                     | Shift cable is too tight.                                 | Turn barrel adjuster on the shifter clockwise.                                        |
|                                                                                                                            | Excessive cable friction, pinched or poorly routed cable. | Lubricate or replace cable and housing. Check for excessive bending of cable housing. |



# 3.0 • FRONT DERAILLEURS


## TECHNICAL DATA / ASSEMBLY REQUIREMENTS



3  
•  
0

|         | Part No.                | Clamp Size | 3.0                                             |                          |
|---------|-------------------------|------------|-------------------------------------------------|--------------------------|
|         |                         |            |                                                 |                          |
| Shifter |                         | 28.6 mm    | —                                               | —                        |
|         |                         | 31.8 mm    | —                                               | —                        |
|         | Cable Routing           |            | Top Pull                                        | Bottom Pull              |
|         | Cage Size               |            | Compact                                         | Compact                  |
|         | Top Gear                |            | 44/42T                                          | 44/42T                   |
|         | Large - Small Capacity  |            | 22T                                             | 22T                      |
|         | Large - Middle Capacity |            | min. 10T                                        | min. 10T                 |
|         | Chainstay Angle         |            | 66-69°                                          | 66-69°                   |
|         | SRAM Micro adj.         |            | ●                                               | ●                        |
|         | SRAM indexing           |            | ●                                               | ●                        |
| Design  | Shim. Rapidf. Plus      |            | ●                                               | ●                        |
|         | Cable Housing           |            | 4 or 5 mm, compressionl., 5.8 mm end caps diam. |                          |
|         | Weight                  |            | 123 g                                           | 123 g                    |
|         | Outer Link              |            | Steel / Grilon Composite                        | Steel / Grilon Composite |
|         | Inner Link              |            | Steel                                           | Steel                    |
|         | Chain Cage              |            | Steel / Chrome Plated                           | Steel / Chrome Plated    |
|         | Clamp                   |            | Steel                                           | Steel                    |
|         | Band Clamp              |            | ●                                               | ●                        |

1

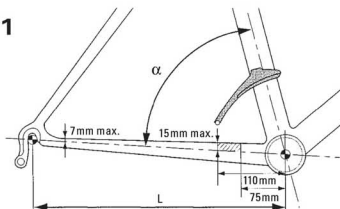

### FRAME DIMENSIONS

(see Fig. 1)

- The seat tube should be positioned in the center of the bottom bracket shell.

### Length of chainstay:

- MTB/Trekking L > 420 mm.
- Rear frame alignment must be symmetrical.

### Chainstay angle:

$\alpha = 66^\circ - 69^\circ$ .

### Chainline:

47.5 – 50 mm.


(Measurement from the center of the bracket to the center of middle chaining.)

### Necessary clearance:

(see Fig. 2)


- Attachment point bottle holder.
- Be sure to leave enough clearance between bottle cage holes and clamp location.

2

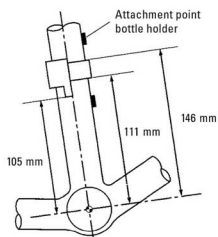


## 3.0 · FRONT DERAILLEURS ASSEMBLY / MAINTENANCE

1

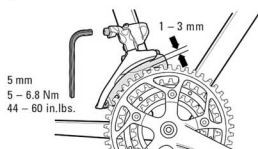


2

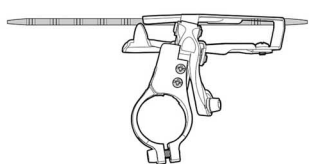


3



4

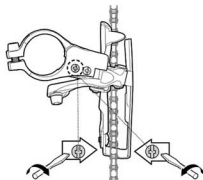

5

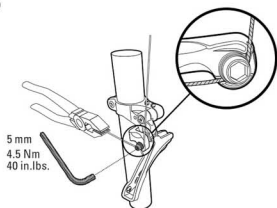

### ASSEMBLY

SRAM 3.0 front derailleurs are designed to work with both compact chainwheels and full size chainwheels. Please note your chainwheel specific adjustment instructions below.

- Attach the front derailleur to the seat tube.
- Adjust the position along the seat tube so that clearance between the front derailleur cage and the large chainring is 1 - 3 mm (*Fig. 1*).

At the same time, align the front derailleur cage outerplate to be parallel with the chainrings (*Fig. 2*).

- Tighten the 5 mm hex clamp bolt to 5 - 6.8 Nm (44 - 60 in.lbs.).
- If a set plug is present, remove it at this time (*Fig. 3*).

### LOW LIMIT ADJUSTMENT (see *Fig. 4*)

- Set the chain to the largest rear cog and the smallest front chainring.
- Adjust the low limit screw so that clearance between the front derailleur cage inner plate and the chain is:  
Compact 0 - 0.5 mm  
Full size 0 - 0.5 mm (46T Largest Chainr.)  
1 - 1.5 mm (48T Largest Chainr.)

### CONNECTING CABLE

- Check that the chain and the front derailleur are in the smallest chainring position.
- Rotate the front shifter so the indicator mark is aligned with the '1' mark.
- Turn the front shifter barrel adjuster clockwise fully into the shifter, then turn counterclockwise 1 full turn.
- Feed the front shifter cable through the cable housing and stops.
- Run the cable under the cable anchor washer and hold taut.  
- Top pull (*Fig. 5*).  
- Bottom pull (*Fig. 6*).
- Tighten the 5 mm hex cable anchor bolt to 4.5 Nm (40 in.lbs.). Be careful not to crush or deform the cable.
- Shift the chain up and down the chainrings several times.

### HIGH LIMIT ADJUSTMENT (see *Fig. 8*)

- Set the chain to the smallest rear cog and the largest front chainring.
- Adjust the high limit screw so that clearance between the front derailleur cage outer plate and the chain is 0 - 0.5 mm.

### INDEX SHIFTING ADJUSTMENT

(see *Fig. 7*)

For SRAM indexing shifter models only (not micro adjust shifter):

- Set the chain to the largest rear cog and the middle front chainring.
- Adjust the front shifter barrel adjuster so that clearance between the front derailleur cage inner plate and the chain is 0 - 0.5 mm.


### MAINTENANCE

- Do not use solvents or corrosive materials to clean the components.
- Lubricate the shifting joints regularly (*Fig. 9*).
- Grease any cable guides (e.g. beneath the bottom bracket).


## 3.0 • FRONT DERAILLEURS ASSEMBLY / MAINTENANCE




6

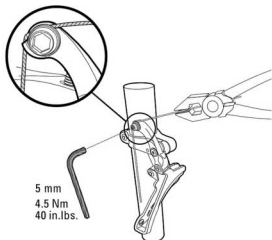


7

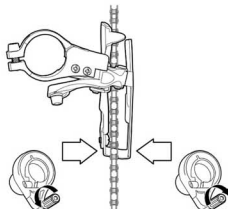

8

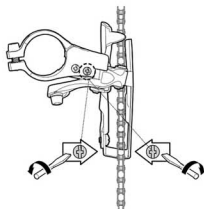

9

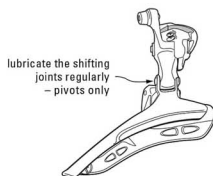

### TROUBLESHOOTING

| Problem                                                                                                      | Cause                                                          | Remedy                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Shifter actuated, chain fails to change chainring.                                                           | Shift cable incorrectly clamped.                               | Check shift cable and correct as necessary (cable clamp; cable housing stops; cable recess in shifter; cable tension). |
|                                                                                                              | High / low limit screw poorly adjusted.                        | Correct limit screws.                                                                                                  |
|                                                                                                              | Clearance between cage and large chainring is too big / small. | Correct position (1–3 mm).                                                                                             |
| Chain falls over large / small chainring.                                                                    | High / low limit screw poorly adjusted.                        | Correct limit screws.                                                                                                  |
| Chain is on middle chainring and scrapes against the cage when the largest or smallest sprocket is selected. | Precise adjustment of cable tension is incorrect.              | Readjust shifter barrel adjuster.                                                                                      |
| Force required to actuate gears is too high.                                                                 | Excessive cable friction, pinched or poorly routed cable.      | Lubricate or replace cable and housing. Check for excessive bending of cable housing.                                  |
| Crank collides with front derailleur.                                                                        | High gear limit screw incorrectly adjusted.                    | Correct high limit screw.                                                                                              |
|                                                                                                              | Cage not parallel with chainring.                              | Correct the front derailleur position.                                                                                 |



# X.0 / 9.0SL / 9.0 / 7.0 / ROCKET / ATTACK · TWIST SHIFTERS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

1:1  
2:1

X.0

9.0SL

9.0SL  
9.0  
7.0

7.0  
ROCKET

|                         |                    | X.0 <i>NEW</i>       |                |                            | 9.0SL                |        |                |        |
|-------------------------|--------------------|----------------------|----------------|----------------------------|----------------------|--------|----------------|--------|
|                         |                    | Version              | —              | —                          | Half Pipe            | Shorty | Half Pipe      | Shorty |
| Com-<br>pati-<br>bility | Shifter Type       | Front / Micro adjust | Front / Index  | Rear 1:1 / ESP             | Front / Micro adjust |        | Front / Index  |        |
|                         | Speeds             | 3                    | 3              | 9                          |                      |        | 3              |        |
|                         | Derailleur         | SRAM & Shimano       | SRAM & Shimano | SRAM X.0/9.0SL/9.0/7.0/5.0 | SRAM & Shimano       |        | SRAM & Shimano |        |
|                         | Crankset           | Shimano              | Shimano        |                            | Shimano              |        | Shimano        |        |
|                         | Cable Pull Release | SRS                  | SRS            | SRS                        | SRS                  |        | SRS            |        |
|                         | Cable              | Teflon Coated        | ←              | ←                          | Teflon Coated        |        | ←              |        |
|                         | Gear Indication    | Window               | Window         | Window                     | Window               |        | Window         |        |
|                         | Barrel Adjuster    | Indexing             | Indexing       | Indexing                   | Indexing             |        | Indexing       |        |
|                         | Clamping Diameter  | 22.3mm               | 22.3mm         | 22.3mm                     | 22.3mm               |        | 22.3mm         |        |
|                         | Shifter Length     | 70 mm                | ←              | ←                          | 98 mm                |        | 70 mm          |        |

|                         |                    | 9.0SL                      |        | 9.0                  |        | 7.0            |        | 7.0                        |        |
|-------------------------|--------------------|----------------------------|--------|----------------------|--------|----------------|--------|----------------------------|--------|
|                         |                    | Half Pipe                  | Shorty | Half Pipe            | Shorty | Half Pipe      | Shorty | Half Pipe                  | Shorty |
| Com-<br>pati-<br>bility | Shifter Type       | Rear 1:1 / ESP             |        | Front / Micro adjust |        | Front / Index  |        | Rear 1:1 / ESP             |        |
|                         | Speeds             | 9                          |        | 3                    |        | 9              |        | 3                          |        |
|                         | Derailleur         | SRAM X.0/9.0SL/9.0/7.0/5.0 |        | SRAM & Shimano       |        | SRAM & Shimano |        | SRAM X.0/9.0SL/9.0/7.0/5.0 |        |
|                         | Crankset           |                            |        | Shimano              |        | Shimano        |        | Shimano                    |        |
|                         | Cable Pull Release | SRS                        |        | SRS                  |        | SRS            |        | SRS                        |        |
|                         | Cable              | Teflon Coated              |        | Teflon Coated        |        | ←              |        | Teflon Coated              |        |
|                         | Gear Indication    | Window                     |        | Window               |        | Window         |        | Window                     |        |
|                         | Barrel Adjuster    | Indexing                   |        | Indexing             |        | Indexing       |        | Indexing                   |        |
|                         | Clamping Diameter  | 22.3mm                     |        | 22.3mm               |        | 22.3mm         |        | 22.3mm                     |        |
|                         | Shifter Length     | 98 mm                      | 70 mm  | 98 mm                | 70 mm  | ←              | ←      | 98 mm                      | 70 mm  |

|                         |                    | 7.0            |        | Rocket                     |              | Attack               |        | Attack         |        |
|-------------------------|--------------------|----------------|--------|----------------------------|--------------|----------------------|--------|----------------|--------|
|                         |                    | Half Pipe      | Shorty | Half P. Sho.               | Half P. Sho. | Half Pipe            | Shorty | Half Pipe      | Shorty |
| Com-<br>pati-<br>bility | Shifter Type       | Front / Index  |        | Rear 1:1 / ESP             |              | Front / Micro adjust |        | Front / Index  |        |
|                         | Speeds             | 3              |        | 9                          |              | 3                    |        | 9              |        |
|                         | Derailleur         | SRAM & Shimano |        | SRAM X.0/9.0SL/9.0/7.0/5.0 |              | SRAM & Shimano       |        | SRAM & Shimano |        |
|                         | Crankset           | Shimano        |        |                            |              | Shimano              |        | Shimano        |        |
|                         | Cable Pull Release | SRS            |        | SRS                        |              | SRS                  |        | SRS            |        |
|                         | Cable              | Teflon Coated  |        | ←                          |              | Teflon Coated        |        | ←              |        |
|                         | Gear Indication    | Window         |        | Window                     |              | Window               |        | Window         |        |
|                         | Barrel Adjuster    | Indexing       |        | Indexing                   |              | Indexing             |        | Indexing       |        |
|                         | Clamping Diameter  | 22.3mm         |        | 22.3mm                     |              | 22.3mm               |        | 22.3mm         |        |
|                         | Shifter Length     | 98 mm          | 70 mm  | ←                          | ←            | 98 mm                | 70 mm  | ←              | ←      |

ATTACK


### CABLE HOUSING

- Use only new high quality cable and compressionless cable housing with end caps.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.


|                         |                    | Attack               |        | Attack         |        | Attack             |              |
|-------------------------|--------------------|----------------------|--------|----------------|--------|--------------------|--------------|
|                         |                    | Half Pipe            | Shorty | Half Pipe      | Shorty | Half P. Sho.       | Half P. Sho. |
| Com-<br>pati-<br>bility | Shifter Type       | Front / Micro adjust |        | Front / Index  |        | Rear 2:1           |              |
|                         | Speeds             | 3                    |        | 9              |        | 8                  |              |
|                         | Derailleur         | SRAM & Shimano       |        | SRAM & Shimano |        | SRAM 2:1 & Shimano |              |
|                         | Crankset           | Shimano              |        | Shimano        |        |                    |              |
|                         | Cable Pull Release | SRS                  |        | SRS            |        | SRS                |              |
|                         | Cable              | Teflon Coated        |        | ←              |        | ←                  |              |
|                         | Gear Indication    | Window               |        | Window         |        | Window             |              |
|                         | Barrel Adjuster    | Indexing             |        | Indexing       |        | Indexing           |              |
|                         | Clamping Diameter  | 22.3mm               |        | 22.3mm         |        | 22.3mm             |              |
|                         | Shifter Length     | 98 mm                | 70 mm  | ←              | ←      |                    |              |

# X.0 / 9.0SL / 9.0 / 7.0 / ROCKET / ATTACK · TWIST SHIFTERS ASSEMBLY / MAINTENANCE


1

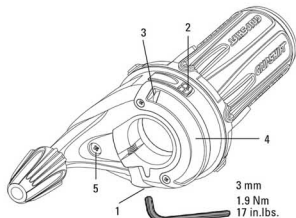


2

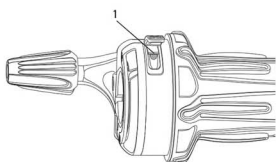


3

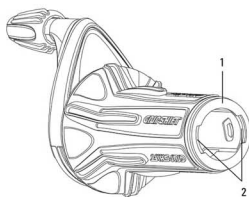

4

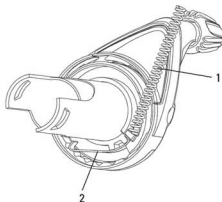

## SHIFTER ANATOMY

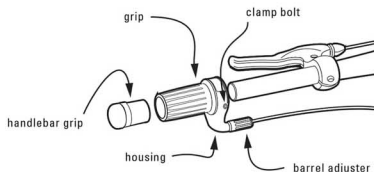

## ASSEMBLY

Front and Rear:

- Slide the shifter onto the handlebar.
  - If necessary, move the brake lever to allow for shifter and handlebar grip.
  - Bar end users – don't forget to leave room for the bar end.
- Rotate the shifter until the barrel adjuster is beneath (but out of the way of) the brake lever.
- Tighten the 3 mm hex clamp bolt (1, Fig. 1) to 1.9 Nm (17 in.lbs.).
- Slide the handlebar grip onto the handlebar.
  - Solvents, lubricants or hair spray may damage handlebar grip!**
  - Use of a spray adhesive (e.g. 3M SUPER 77) or grip glue may help installation and may minimize grip rotation caused by wear or moisture.
- Feed the cable through the cable housing and stops.
- Attach cable to the derailleur.
- Adjust indexing per derailleur instruction.

### Caution:

- Always check the front and rear brake levers for proper operation.**
- If there is interference between shifters and brake levers, re-adjust lever and shifter placement.**
- Check again for proper operation!**

## CABLE CHANGE

### Advice:

- Leave the shifter on the handlebar.**
- No need to move other components.**
- The shifter does not need to be opened.**
- Use only new high quality cable and compressionless cable housing with end caps.**

Front and Rear:

- Detach the cable from the derailleur.
- Cut cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and cable housing.
- From the edge (2, Fig. 1), pull open the cable change hatch. The hinge of the hatch should remain attached to the shifter.
- Rotate the shifter fully in the cable

release direction (3). (Gear "1" on the front shifter, gear "9" on the rear shifter.)

- Look for cable head entry (Fig. 2).
- Using a small flat head screw driver, push back the tab (1, Fig. 2) covering the cable head.
- Push cable up/out of the shifter and discard.
- Feed the new cable through the cable entry and out the barrel adjuster.
- Pull cable snug to seat cable head under tab.
- Replace cable change hatch.
- Feed the cable through the new cable housing and frame stops.
- Attach cable to the derailleur.
- Adjust indexing per derailleur instruction.

## GRIP REPLACEMENT

### Advice:

**Do not remove the triangular housing cover to make the change.**


### Removal:

- Rotate the shifter fully in the cable release direction (3, Fig. 1). (Gear "1" on the front shifter, gear "9" on the rear shifter.)
- Using a 3 mm hex wrench (1, Fig. 1), remove shifter from the handlebar.
- While holding shifter housing and grip together in one hand, remove axial fixture ring (1, Fig. 3) by squeezing together housing tabs (2).
- While pushing/rotating the grip lightly forward (release direction), slowly move the grip outward away from housing.
  - Pulling the grip quickly may cause the coil spring (1, Fig. 4) to move out of position.

### Replacement:

- Replace front end of coil spring (1, Fig. 4) on to tab in groove if necessary.
- While sliding grip up towards the housing, align spring tab so that it catches the open end of the coil spring.
- Rotate grip forward slightly compressing the coil spring and engage grip and tab into the housing.
- Replace axial fixture ring (1, Fig. 3) over housing tabs (2).

5

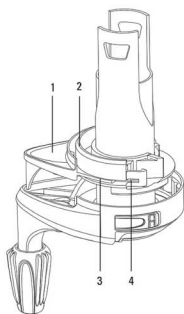

### INTERNAL CLEANING

#### Advice:

*When shifting performance is compromised, try replacing the cable and housing before you disassemble the shifter for cleaning.*


#### Disassembly:

- Follow "GRIP REPLACEMENT/Removal".
- Remove lens cover (4, **Fig. 1**).
- Remove gear indicator needle (3) by pulling straight out.
- Remove the spool's coil spring (1, **Fig. 4**).
- Using small pliers, pull leaf spring (2) straight out. Take note of the shape of the spring so that you can replace it in the correct direction.
- Remove housing cover screw (5, **Fig. 1**). Slide housing cover (1, **Fig. 5**) and spool (2) out at the same time being careful not to break the tab (3) on the cover.
- Clean all parts with soapy water only.
- Using only Gip Shift Jonnisnot, grease housing tube, detentes and cable track at housing bend.

#### Reassembly:

- Slip tab (3, **Fig. 5**) on housing cover into groove (4) on spool.
- Slide spool and cover into housing and install cover screw (5, **Fig. 1**).
- Place leaf spring (2, **Fig. 4**) into spool. Push down slightly on opposite end of spring, then seat spring completely into spool and housing.
- Follow "GRIP REPLACEMENT/Replacement".
- Rotate shifter to full release position.
- Install gear indication needle (1, **Fig. 6**) in slot (2).
- Replace gear indicator lens (4, **Fig. 1**) and screws.
- Install shifter on to bars and check for proper function.

6

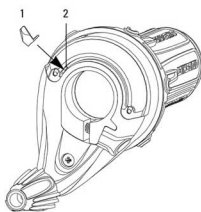



# 5.0 ROYALE / 5.0 / VERIO / CENTERA · TWIST SHIFTERS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS



1:1  
2:1

5  
·  
0  
R  
O  
Y  
A  
L  
E

| 5.0 Royale <i>NEW</i> |                    |                      |                     |                            |
|-----------------------|--------------------|----------------------|---------------------|----------------------------|
| Compat-<br>ibility    | Part No.           | —                    | —                   | —                          |
|                       | Shifter Type       | Front / Micro adjust | Front / Index       | Rear 1:1 / ESP             |
|                       | Speeds             | 3                    | 9                   | 8                          |
|                       | Deraillleur        | SRAM & Shimano       | SRAM & Shimano      | SRAM 9.0SL / 9.0 / 7.0     |
|                       | Crankset           | Shimano              | Shimano             | SRAM 9.0SL/9.0/7.0/4.0/5.0 |
|                       | Brake Lever Clamp  | Thickness max. 5 mm  | Thickness max. 5 mm | Thickness max. 5 mm        |
|                       | Cable Pull Release | SRS                  | SRS                 | SRS                        |
|                       | Cable              | DieDrawn             | ←                   | ←                          |
|                       | Gear Indication    | Window               | Window              | Window                     |
|                       | Barrel Adjuster    | Indexing             | Indexing            | Indexing                   |
| Compatibility         | Clamping Diameter  | 22.3 mm              | 22.3 mm             | 22.3 mm                    |
|                       | Shifter Length     | 65 mm                | ←                   | ←                          |
|                       | Weight             | N/A                  | N/A                 | N/A                        |

5  
·  
0

| 5.0 Half Pipe      |                    |                      |                |                            |
|--------------------|--------------------|----------------------|----------------|----------------------------|
| Compat-<br>ibility | Part No.           | —                    | —              | —                          |
|                    | Shifter Type       | Front / Micro adjust | Front / Index  | Rear 1:1 / ESP             |
|                    | Speeds             | 3                    | 9              | 8                          |
|                    | Deraillleur        | SRAM & Shimano       | SRAM & Shimano | SRAM 9.0SL/9.0/7.0         |
|                    | Crankset           | Shimano              | Shimano        | SRAM 9.0SL/9.0/7.0/4.0/5.0 |
|                    | Cable Pull Release | FFS                  | Standard       | Standard                   |
|                    | Cable              | Stainless Steel      | ←              | ←                          |
|                    | Gear Indication    | Printed              | Printed        | Printed                    |
|                    | Barrel Adjuster    | Indexing             | Indexing       | Indexing                   |
|                    | Clamping Diameter  | 22.3 mm              | 22.3 mm        | 22.3 mm                    |
| Compatibility      | Shifter Length     | 100 mm               | ←              | ←                          |
|                    | Weight             | N/A                  | N/A            | N/A                        |

5  
·  
0

| 5.0 Shorty         |                    |                      |                |                        |
|--------------------|--------------------|----------------------|----------------|------------------------|
| Compat-<br>ibility | Part No.           | —                    | —              | —                      |
|                    | Shifter Type       | Front / Micro adjust | Front / Index  | Rear 1:1 / ESP         |
|                    | Speeds             | 3                    | 9              | 8                      |
|                    | Deraillleur        | SRAM & Shimano       | SRAM & Shimano | SRAM 9.0SL / 9.0 / 7.0 |
|                    | Crankset           | Shimano              | Shimano        | SRAM 9.0SL/9.0/7.0/5.0 |
|                    | Cable Pull Release | FFS                  | Standard       | Standard               |
|                    | Cable              | Stainless Steel      | ←              | ←                      |
|                    | Gear Indication    | Printed              | Printed        | Printed                |
|                    | Barrel Adjuster    | Indexing             | Indexing       | Indexing               |
|                    | Clamping Diameter  | 22.3 mm              | 22.3 mm        | 22.3 mm                |
| Compatibility      | Shifter Length     | 57 mm                | ←              | ←                      |
|                    | Weight             | 95 g                 | 95 g           | 95 g                   |

# 5.0 ROYALE / 5.0 / VERIO / CENTERA · TWIST SHIFTERS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

VERIO

|                    |                    | Verio <i>NEW</i>     |                     |                     |                     |
|--------------------|--------------------|----------------------|---------------------|---------------------|---------------------|
| Compati-<br>bility | Part No.           | —                    | —                   | —                   | —                   |
|                    | Shifter Type       | Front / Micro adjust | Front / Index       | Rear 2:1            | Rear 2:1            |
|                    | Speeds             | 3                    | 3                   | 9                   | 8                   |
|                    | Derailleur         | SRAM & Shimano       | SRAM & Shimano      | SRAM 2:1 & Shimano  | SRAM 2:1 & Shimano  |
|                    | Crankset           | Shimano              | Shimano             |                     |                     |
|                    | Brake Lever Clamp  | Thickness max. 5 mm  | Thickness max. 5 mm | Thickness max. 5 mm | Thickness max. 5 mm |
|                    | Cable Pull Release | SRS                  | SRS                 | SRS                 | SRS                 |
|                    | Cable              | DieDrawn             | ←                   | ←                   | ←                   |
|                    | Gear Indication    | Window               | Window              | Window              | Window              |
|                    | Barrel Adjuster    | Indexing             | Indexing            | Indexing            | Indexing            |
|                    | Clamping Diameter  | 22.3 mm              | 22.3 mm             | 22.3 mm             | 22.3 mm             |
|                    | Shifter Length     | 65 mm                | ←                   | ←                   | ←                   |
|                    | Weight             | N/A                  | N/A                 | N/A                 | N/A                 |

CENTERA

|                    |                    | Centera Half Pipe    |                |                    |                    |
|--------------------|--------------------|----------------------|----------------|--------------------|--------------------|
| Compati-<br>bility | Part No.           | —                    | —              | —                  | —                  |
|                    | Shifter Type       | Front / Micro adjust | Front / Index  | Rear 2:1           | Rear 2:1           |
|                    | Speeds             | 3                    | 3              | 9                  | 8                  |
|                    | Derailleur         | SRAM & Shimano       | SRAM & Shimano | SRAM 2:1 & Shimano | SRAM 2:1 & Shimano |
|                    | Crankset           | Shimano              | Shimano        |                    |                    |
|                    | Cable Pull Release | FFS                  | FFS            | Standard           | Standard           |
|                    | Cable              | Stainless Steel      | ←              | ←                  | ←                  |
|                    | Gear Indication    | Printed              | Printed        | Printed            | Printed            |
|                    | Barrel Adjuster    | Indexing             | Indexing       | Indexing           | Indexing           |
|                    | Clamping Diameter  | 22.3 mm              | 22.3 mm        | 22.3 mm            | 22.3 mm            |
|                    | Shifter Length     | 100 mm               | ←              | ←                  | ←                  |
|                    | Weight             | N/A                  | N/A            | N/A                | N/A                |


CENTERA

|                    |                    | Centera Shorty       |                |                    |                    |
|--------------------|--------------------|----------------------|----------------|--------------------|--------------------|
| Compati-<br>bility | Part No.           | —                    | —              | —                  | —                  |
|                    | Shifter Type       | Front / Micro adjust | Front / Index  | Rear 2:1           | Rear 2:1           |
|                    | Speeds             | 3                    | 3              | 9                  | 8                  |
|                    | Derailleur         | SRAM & Shimano       | SRAM & Shimano | SRAM 2:1 & Shimano | SRAM 2:1 & Shimano |
|                    | Crankset           | Shimano              | Shimano        |                    |                    |
|                    | Cable Pull Release | FFS                  | FFS            | Standard           | Standard           |
|                    | Cable              | Stainless Steel      | ←              | ←                  | ←                  |
|                    | Gear Indication    | Printed              | Printed        | Printed            | Printed            |
|                    | Barrel Adjuster    | Indexing             | Indexing       | Indexing           | Indexing           |
|                    | Clamping Diameter  | 22.3 mm              | 22.3 mm        | 22.3 mm            | 22.3 mm            |
|                    | Shifter Length     | 57 mm                | ←              | ←                  | ←                  |
|                    | Weight             | 90 g                 | 90 g           | 90 g               | 90 g               |

### CABLE HOUSING

- Use only new high quality cable and compressionless cable housing with end caps.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

### SHIFTER ANATOMY

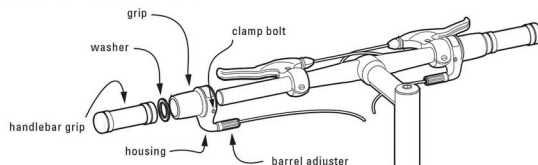


# 5.0 ROYALE / 5.0 / VERIO / CENTERA · TWIST SHIFTERS ASSEMBLY / MAINTENANCE




1:1  
2:1


1

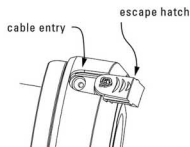


2

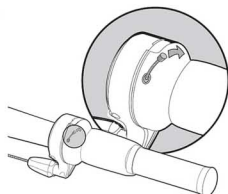

3

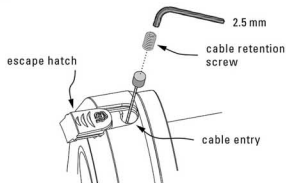

4

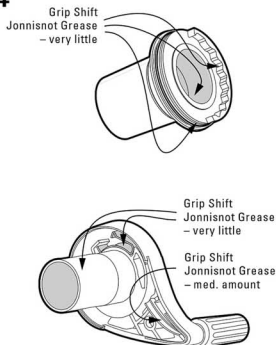

## ASSEMBLY

Front and Rear:

- Slide the shifter onto the handlebar.
  - If necessary, move the brake lever to allow for shifter and handlebar grip.
  - Bar end users – don't forget to leave room for the bar end.
- Rotate the shifter until the barrel adjuster is beneath (but out of the way of) the brake lever.
- Tighten the 3 mm hex clamp bolt to 1.9 Nm (17 in.lbs.).
- Slide the plastic washer onto the handlebar.
- Slide the handlebar grip onto the handlebar.
  - Solvents, lubricants or hair spray may damage the handlebar grips!**
  - Use **only** compressed air or water to aid installation.
- Feed the cable through the cable housing and stops.
- Attach the shifter cable to the derailleur.
- Adjust indexing per derailleur instructions.

## Caution:

- Always check the front and rear brake levers for proper operation.**
- If there is interference between shifters and brake levers, re-adjust lever and shifter placement.**
- Check again for proper operation!**

## CABLE CHANGE

Front and Rear:

### Advice:

- Leave the shifter on the handlebar.**
- No need to move other components.**  
*The shifter does not need to be opened.*
- Use only new high quality cable and compressionless cable housing with end caps.**
- Detach the cable from the derailleur.
- Cut the cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and cable housing.
- Remove the escape hatch (**Fig. 1 / 5.0 and Centera**). 5.0 Royale and Verio see **Fig. 2**.
- Rotate the shifter until the cable entry is visible.
- Only Rear shifter:** remove the 2.5 mm hex cable retention screw (**Fig. 3 / 5.0 und Centera**).
- Remove and discard the rest of the old cable.
- Feed the new cable through the cable entry and out the barrel adjuster. Pull the cable snug (**5.0 and Centera**).
- Only Rear shifter:** replace the cable retention screw – be sure to turn until the screw contacts the cable head.
- Replace the escape hatch.
- Feed the cable through the new cable housing and stops.
- Attach the cable to the derailleur and adjust indexing per derailleur instruction.

## MAINTENANCE

- Clean all shifter parts using only water and mild soap.**
- Use only Grip Shift Jonnissnot Grease for any shifter lubrication.**
- After proper cleaning relubricate the areas shown in Fig. 4.**

## 4.0 / 3.0 / MRX PLUS / MRX · TWIST SHIFTERS

### TECHNICAL DATA / ASSEMBLY REQUIREMENTS

4.0  
3.0

|                    |  | 4.0 Half Pipe        |                |                      | 3.0 Shorty           |                |
|--------------------|--|----------------------|----------------|----------------------|----------------------|----------------|
| Part No.           |  | —                    | —              | —                    | —                    | —              |
| Shifter Type       |  | Front / Micro adjust | Front / Index  | Rear 1:1 / ESP       | Front / Micro adjust | Front / Index  |
| Speeds             |  | 3                    |                | 8                    | 7                    | 3              |
| Derailleur         |  | SRAM & Shimano       | SRAM & Shimano | SRAM 7.0/5.0/4.0/3.0 | SRAM & Shimano       | SRAM & Shimano |
| Crankset           |  | Shimano              | Shimano        |                      | Shimano              | Shimano        |
| Cable Pull Release |  | FFS direct           | FFS direct     | Standard             | FFS                  | FFS            |
| Cable              |  | Die Drawn Steel      | ←              | ←                    | Die Drawn Steel      | ←              |
| Gear Indication    |  | Printed              | Printed        | Printed              | Printed              | Printed        |
| Barrel Adjuster    |  | Indexing             | Indexing       | Indexing             | Indexing             | Indexing       |
| Clamping Diameter  |  | 22.3 mm              | 22.3 mm        | 22.3 mm              | 22.3 mm              | 22.3 mm        |
| Shifter Length     |  | 96 mm                | ←              | ←                    | 64 mm                | ←              |
| Weight             |  | N/A                  | N/A            | N/A                  | 58 g                 | 58 g           |

3.0  
MRX  
PLUS

|                    |  | 3.0 Shorty           |                      |                | MRX Plus Half Pipe |                         |   |
|--------------------|--|----------------------|----------------------|----------------|--------------------|-------------------------|---|
| Part No.           |  | —                    | —                    | —              | —                  | —                       | — |
| Shifter Type       |  | Rear 1:1 / ESP       | Front / Micro adjust | Front / Index  | Rear 2:1           | Rear Shimano Rapid Rise |   |
| Speeds             |  | 8                    | 7                    | 3              | 8                  | 7                       | 8 |
| Derailleur         |  | SRAM 7.0/5.0/4.0/3.0 | SRAM & Shimano       | SRAM & Shimano | SRAM 2:1 & Shimano | Shimano Rapid Rise      |   |
| Crankset           |  |                      | Shimano              | Shimano        |                    |                         |   |
| Cable Pull Release |  | Standard             | FFS direct           | FFS direct     | Standard           | Standard                |   |
| Cable              |  | Die Drawn Steel      | Die Drawn Steel      | ←              | ←                  | ←                       |   |
| Gear Indication    |  | Printed              | Printed              | Printed        | Printed            | Printed                 |   |
| Barrel Adjuster    |  | Indexing             | Indexing             | Indexing       | Indexing           | Indexing                |   |
| Clamping Diameter  |  | 22.3 mm              | 22.3 mm              | 22.3 mm        | 22.3 mm            | 22.3 mm                 |   |
| Shifter Length     |  | 64 mm                | 96 mm                | ←              | ←                  | ←                       |   |
| Weight             |  | 58 g                 | N/A                  | N/A            | N/A                | N/A                     |   |


MRX

|                    |  | MRX Shorty           |                |                    |   |                         |   |
|--------------------|--|----------------------|----------------|--------------------|---|-------------------------|---|
| Part No.           |  | —                    | —              | —                  | — | —                       | — |
| Shifter Type       |  | Front / Micro adjust | Front / Index  | Rear 2:1           |   | Rear Shimano Rapid Rise |   |
| Speeds             |  |                      | 3              | 8                  | 7 | 6                       | 7 |
| Derailleur         |  | SRAM & Shimano       | SRAM & Shimano | SRAM 2:1 & Shimano |   | Shimano Rapid Rise      |   |
| Crankset           |  | Shimano              | Shimano        |                    |   |                         |   |
| Cable Pull Release |  | FFS                  | FFS            | Standard           |   | Standard                |   |
| Cable              |  | Standard Steel       | ←              | ←                  |   | ←                       |   |
| Gear Indication    |  | Printed              | Printed        | Printed            |   | Printed                 |   |
| Barrel Adjuster    |  | Indexing             | Indexing       | Indexing           |   | Indexing                |   |
| Clamping Diameter  |  | 22.3 mm              | 22.3 mm        | 22.3 mm            |   | 22.3 mm                 |   |
| Shifter Length     |  | 64 mm                | ←              | ←                  |   | ←                       |   |
| Weight             |  | 58 g                 | 58 g           | 58 g               |   | 58 g                    |   |

#### CABLE HOUSING

- Use only new high quality cable and compressionless cable housing with end caps.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

#### SHIFTER ANATOMY

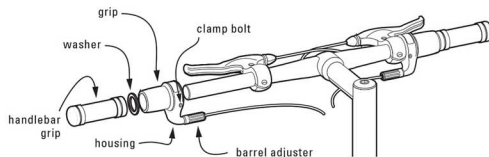


# 4.0 / 3.0 / MRX PLUS / MRX · TWIST SHIFTERS ASSEMBLY / MAINTENANCE




1:1  
2:1


1

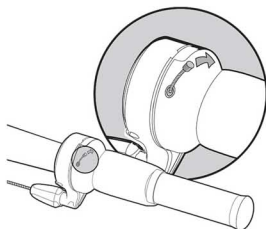

2

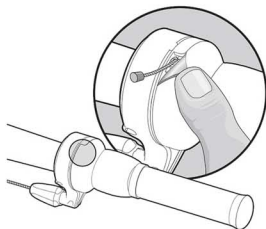

3

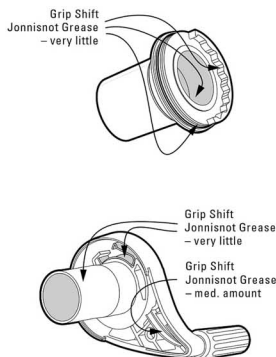

## ASSEMBLY

Front and Rear:

- Slide the shifter onto the handlebar.
  - If necessary, move the brake lever to allow for shifter and handlebar grip.
  - Bar end users – don't forget to leave room for the bar end.
- Rotate the shifter until the barrel adjuster is beneath (but out of the way of) the brake lever.
- Tighten the 2.5 mm hex clamp bolt to 1.7 Nm (15 in.lbs.).
- Slide the plastic washer onto the handlebar.
- Slide the handlebar grip onto bar.
  - **Solvents, lubricants or hair spray may damage handlebar grips!**
  - Use **only** compressed air or water to aid installation.
- Feed the cable through the cable housing and frame stops.
- Attach cable to the derailleur.
- Adjust indexing per derailleur instructions.

**Not recommended for use on thin walled aluminum handlebars such as Hyperlite® type handlebars.**

**Advice:**

- **Always check the front and rear brake levers for proper operation.**
- **If there is interference between shifters and brake levers, re-adjust lever and shifter placement.**
- **Check again for proper operation!**

## CABLE CHANGE

Front and Rear:

**Caution:**

- **Leave the shifter on the handlebar.**
- **No need to move other components.**
- **The shifter does not need to be opened.**
- **Use only new high quality cable and compressionless cable housing with endcaps.**

**See Figure 1 (4.0 / MRX Plus) or 2 (3.0 / MRX)**

- Detach the cable from the derailleur.
- Cut the cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and cable housing.
- Rotate the shifter until the cable entry is visible.
- 3.0 / MRX only: Carefully peel back the corner of the grip cover shown in **Fig. 2**. Use your fingernail or a small screw-driver.
- Remove and discard the rest of the old cable.
- Feed the new cable through the cable entry in the grip and out through the barrel adjuster.
- Feed the cable through the new cable housing and stops.
- Attach the cable to the derailleur and adjust indexing per derailleur instruction.

## MAINTENANCE

- **Clean all shifter parts using only water and mild soap.**
- **Use only Grip Shift Jonnissnot Grease for any shifter lubrication.**
- **After proper cleaning relubricate the areas shown in Fig. 3.**

## 9.0 / GEMINI PRO • TRIGGER SHIFTERS

### TECHNICAL DATA / ASSEMBLY REQUIREMENTS

9.0

| 9.0                       |                 |                        |   |
|---------------------------|-----------------|------------------------|---|
| <b>Part No.</b>           | —               | —                      | — |
| <b>Shifter Type</b>       | Front/ Index    | Rear 1:1 / ESP         |   |
| <b>Speeds</b>             | 3               | 9                      | 8 |
| <b>Derailleur</b>         | SRAM & Shimano  | SRAM 9.0SL / 9.0 / 7.0 |   |
| <b>Crankset</b>           | Shimano         |                        |   |
| <b>Cable Pull Release</b> | IT              | IT                     |   |
| <b>Cable</b>              | Stainless Steel | ←                      |   |
| <b>Gear Indication</b>    | Window          | Window                 |   |
| <b>Barrel Adjuster</b>    | Indexing        | Indexing               |   |
| <b>Clamping Diameter</b>  | 22.3 mm         | 22.3 mm                |   |
| <b>Shifter Length</b>     | 26 mm           | ←                      |   |
| <b>Weight</b>             | N/A             | N/A                    |   |


GEMINI PRO

| Gemini Pro                |                 |                    |   |
|---------------------------|-----------------|--------------------|---|
| <b>Part No.</b>           | —               | —                  | — |
| <b>Shifter Type</b>       | Front/ Index    | Rear 2:1           |   |
| <b>Speeds</b>             | 3               | 9                  | 8 |
| <b>Derailleur</b>         | SRAM & Shimano  | SRAM 2:1 & Shimano |   |
| <b>Crankset</b>           | Shimano         |                    |   |
| <b>Cable Pull Release</b> | IT              | IT                 |   |
| <b>Cable</b>              | Stainless Steel | ←                  |   |
| <b>Gear Indication</b>    | Window          | Window             |   |
| <b>Barrel Adjuster</b>    | Indexing        | Indexing           |   |
| <b>Clamping Diameter</b>  | 22.3 mm         | 22.3 mm            |   |
| <b>Shifter Length</b>     | 26 mm           | ←                  |   |
| <b>Weight</b>             | N/A             | N/A                |   |

#### CABLE HOUSING

- Use only new high quality cable and compressionless cable housing with end caps.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

#### SHIFTER ANATOMY

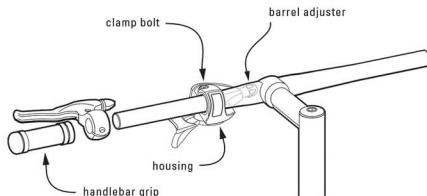


## 9.0 / GEMINI PRO · TRIGGER SHIFTERS ASSEMBLY / MAINTENANCE




1:1  
2:1

1


3 mm  
3.4 Nm  
30 in.lbs.

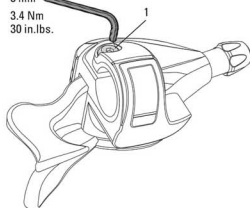

2

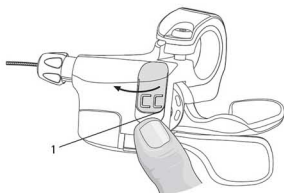

3

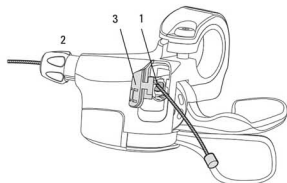

### ASSEMBLY

Front and Rear:

- Slide the shifter onto the handlebar.
- Tighten the 3 mm hex clamp bolt (1, Fig. 1) to 1.9 Nm (17 in.lbs.).
- Slide the handlebar grip onto the handlebar (external diameter must not exceed 32 mm in the area of the shifter).
  - **Solvents, lubricants or hair spray may damage the handlebar grips!**
  - Use **only** compressed air or water to aid installation.
- Feed the cable through the cable housing and stops.
- Attach the shifter cable to the derailleur.
- Adjust indexing per derailleur instructions.

### Caution:

- **Always check the front and rear brake levers for proper operation.**
- **If there is interference between shifters and brake levers, re-adjust lever and shifter placement.**
- **Check again for proper operation!**

### CABLE CHANGE

Front and Rear:

#### Advice:

- **Leave the shifter on the handlebar.**
- **The shifter does not need to be opened.**
- **Use only new high quality cable and compressionless cable housing with endcaps.**
- Detach the cable from the derailleur.
- Cut the cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and cable housing.
- Line up the "1" (front) or HIGHEST gear number (rear) mark with the indicator mark.
- From the edge (1, Fig. 2), pull open the cable change hatch. The hinge of the hatch should remain attached to the shifter.
- Look for cable head entry (1, Fig. 3).
- Push cable up/out of the shifter and discard.
- Feed the new cable through the cable entry and out the barrel adjuster (2).
- Replace cable change hatch (3).
- Feed the cable through the new cable housing and frame stops.
- Attach cable to the derailleur.
- Adjust indexing per derailleur instruction.

### MAINTENANCE

- **Do not disassemble the shifter.**

# 3.0 IBS / MRX IBS · INTEGRATED BRAKE SHIFTERS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS


3  
·  
0  
I  
B  
S

| 3.0 IBS Shorty     |                    |                      |                 |                            |
|--------------------|--------------------|----------------------|-----------------|----------------------------|
| Compati-<br>bility | Part No.           | —                    | —               | —                          |
|                    | Shifter Type       | Front / Micro adjust | Front / Index   | Rear 1:1 / ESP             |
|                    | Speeds             | 3                    | 8               | 7                          |
|                    | Derailleur         | SRAM or Shimano      | SRAM or Shimano | SRAM 9.0SL/9.0/7.0/5.0/3.0 |
|                    | Crankset           | Shimano              | Shimano         | SRAM 9.0SL/9.0/7.0/5.0/3.0 |
| Brake              | Brake Compatib.    | Linear Pull          | ←               | ←                          |
|                    | Cable Pull Release | FFS                  | FFS             | Standard                   |
|                    | Cable              | Die Drawn Steel      | ←               | ←                          |
|                    | Gear Indication    | Printed              | Printed         | Printed                    |
|                    | Barrel Adjuster    | Indexing             | Indexing        | Indexing                   |
| Brake              | Clamping Diameter  | 22.3mm               | 22.3mm          | 22.3mm                     |
|                    | Shifter Length     | 75 mm                | ←               | ←                          |
|                    | Lever Size         | 3 Finger             | ←               | ←                          |
|                    | Cable Pull         | 24 mm                | ←               | ←                          |
|                    | Leverage Adjust    | Single Position      | ←               | ←                          |
| Brake              | Reach Adjust       | Yes                  | Yes             | Yes                        |
|                    | Barrel Adjuster    | Lock Ring            | Lock Ring       | Lock Ring                  |
|                    | Weight             | N/A                  | N/A             | N/A                        |

MRX  
I  
B  
S

| MRX IBS Shorty     |                    |                      |                 |                     |
|--------------------|--------------------|----------------------|-----------------|---------------------|
| Compati-<br>bility | Part No.           | —                    | —               | —                   |
|                    | Shifter Type       | Front / Micro adjust | Front / Index   | Rear 2:1            |
|                    | Speeds             | 3                    | 7               |                     |
|                    | Derailleur         | SRAM or Shimano      | SRAM or Shimano | SRAM 2:1 or Shimano |
|                    | Crankset           | Shimano              | Shimano         |                     |
| Brake              | Brake Compatib.    | Linear Pull          | ←               | ←                   |
|                    | Cable Pull Release | FFS                  | FFS             | Standard            |
|                    | Cable              | Standard Steel       | ←               | ←                   |
|                    | Gear Indication    | Printed              | Printed         | Printed             |
|                    | Barrel Adjuster    | Indexing             | Indexing        | Indexing            |
| Brake              | Clamping Diameter  | 22.3mm               | 22.3mm          | 22.3mm              |
|                    | Shifter Length     | 75 mm                | ←               | ←                   |
|                    | Lever Size         | 3 Finger             | ←               | ←                   |
|                    | Cable Pull         | 24 mm                | ←               | ←                   |
|                    | Leverage Adjust    | Single Position      | ←               | ←                   |
| Brake              | Reach Adjust       | Yes                  | Yes             | Yes                 |
|                    | Barrel Adjuster    | Lock Ring            | Lock Ring       | Lock Ring           |
|                    | Weight             | N/A                  | N/A             | N/A                 |

**Caution:**  
SRAM Integrated Brake Shifters are designed for use with linear-pull brakes. Do not use SRAM Integrated Brake Shifters with conventional cantilever brakes (those with arms measuring less than 76 mm and utilizing a non-linear straddle cable). Use of SRAM Integrated Brake Shifters with conventional cantilever brakes will result in faulty braking performance.

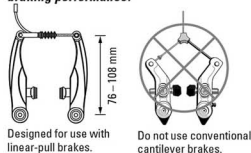

### CABLE HOUSING


- Use only new high quality cable and compressionless cable housing with end caps.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

# 3.0 IBS / MRX IBS · INTEGRATED BRAKE SHIFTERS ASSEMBLY / MAINTENANCE




1:1  
2:1


## SHIFTER ANATOMY

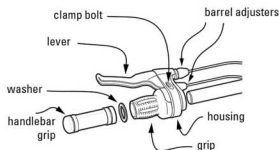


1

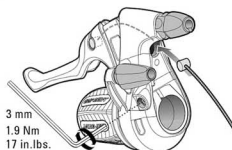


2

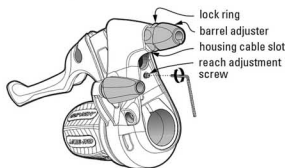

3

 

4

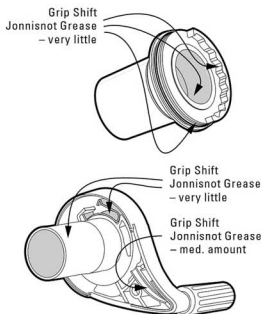

## ASSEMBLY

### Front and Rear:

- Slide the shifter onto the handlebar.
  - Leave room for the handlebar grip.
  - Bar end users – don't forget to leave room for the bar end.
- Tighten the 3 mm hex clamp bolt to 1.9 Nm (17 in.lbs.) (**Fig. 1**).
- Slide the plastic washer onto the handlebar.
- Slide the handlebar grip onto the handlebar.
  - Solvents, lubricants or hair spray may damage handlebar grips!**
  - Use **only** compressed air or water to aid installation.

### Shifter:

- Feed the shifter cable through the shifter cable housing and stops.
- Attach the cable to the derailleur.
- Adjust indexing per derailleur instructions.

### Brake lever:

- Line up the brake lever barrel adjuster, lock ring and housing cable slots (**Fig. 2**).
- Pull on the lever and push the brake cable head through the opening in the brake lever housing (**Fig. 1**).
- Install the cable head into the cable socket in the lever.
- Set up the brakes and brake pads per brake instructions.
- Actuate each brake lever 5–10 times.
  - Check that all brake system components are functioning properly.**

### Reach adjustment:

- Using a 2 mm hex wrench (**Fig. 2**).
- Turn the reach adjustment screw clockwise to bring the lever closer to the handlebars.
- Turn the screw counterclockwise to move the lever further away.

### Caution:

- Do not turn reach adjust screw past flush with the housing!**
- After any adjustment to the reach, always check the brake cable tension to ensure proper braker system performance. Re-adjust the cable tension if necessary.**
- Always check the front and rear brake levers for proper operation.**

## CABLE CHANGE

### Front and Rear:

#### Advice:

- Leave the shifter on the handlebar.
- No need to move other components. The shifter does not need to be opened.
- Use only new high quality cable and compressionless cable housing with end caps.

- Detach the cable from the derailleur.
- Cut the cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and cable housing.
- Line up the "1" (front) or HIGHEST gear number (rear) mark with the indicator mark.
- Carefully peel back the corner of the ip cover shown in **Fig. 3**. Use your fingernail or a small screwdriver.
- Remove and discard the rest of the old cable.
- Feed the new cable through the cable entry in the grip and out through the barrel adjuster.
- Feed the cable through the new cable housing and stops.
- Attach the cable to the derailleur and adjust indexing per derailleur instruction.

## MAINTENANCE

- Clean all shifter parts using only water and mild soap.**
- Use only Grip Shift Jonnisnot Grease for any shifter lubrication.**
- After proper cleaning relubricate the areas shown in Fig. 4.**

# CASSETTES

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

9  
·  
0  
  
7  
·  
0


|                    |                | 9.0 Spider                 |                            | 7.0                        |                            |
|--------------------|----------------|----------------------------|----------------------------|----------------------------|----------------------------|
| Compati-<br>bility | Part No.       | —                          | —                          | —                          | —                          |
|                    |                | 34 T                       | 32 T                       | 34 T                       | 32 T                       |
| Design             | Largest Cog    | 34 T                       | 32 T                       | 34 T                       | 32 T                       |
|                    | Speeds         | 9                          | 9                          | 9                          | 9                          |
|                    | Chains         | SRAM / Shimano             | SRAM / Shimano             | SRAM / Shimano             | SRAM / Shimano             |
|                    | Hubs           | SRAM / Shimano             | SRAM / Shimano             | SRAM / Shimano             | SRAM / Shimano             |
|                    | Cogs           | 11/12/14/16/18/21/24/28/34 | 11/12/14/16/18/21/24/28/32 | 11/12/14/16/18/21/24/28/34 | 11/12/14/16/18/21/24/28/32 |
|                    | Locking torque | 40 Nm                      | 40 Nm                      | 40 Nm                      | 40 Nm                      |
|                    | Weight         | 300 g                      | 290 g                      | 340 g                      | 330 g                      |
|                    | Cogs           | SAPH 440 steel             | SAPH 440 steel             | SAPH 440 steel             | SAPH 440 steel             |
|                    | Spider         | Grilon Composite           | Grilon Composite           |                            |                            |
|                    | Rivets         | Stainless Steel            | Stainless Steel            |                            |                            |
|                    | Screws         |                            |                            | Steel / Zinc Coat          | Steel / Zinc Coat          |
|                    | Finish         | Matte Ni-Chrome Plated     | Matte Ni-Chrome Plated     | Matte Ni-Chrome Plated     | Matte Ni-Chrome Plated     |

5  
·  
0  
  
X  
F  
·  
8

|                    |                | 5.0                     |                         | XF-8                    |   |
|--------------------|----------------|-------------------------|-------------------------|-------------------------|---|
| Compati-<br>bility | Part No.       | —                       | —                       | —                       | — |
|                    |                | 32 T                    | 28 T                    | 32 T                    |   |
| Design             | Largest Cog    | 32 T                    | 28 T                    | 32 T                    |   |
|                    | Speeds         | 8                       | 8                       | 8                       |   |
|                    | Chains         | SRAM / Shimano          | SRAM / Shimano          | SRAM / Shimano          |   |
|                    | Hubs           | SRAM / Shimano          | SRAM / Shimano          | SRAM / Shimano          |   |
|                    | Cogs           | 11/12/14/16/18/21/26/32 | 11/12/14/16/18/21/24/28 | 11/12/14/16/18/21/26/32 |   |
|                    | Locking torque | 40 Nm                   | 40 Nm                   | 40 Nm                   |   |
|                    | Weight         | 280 g                   | 250 g                   | 400 g                   |   |
|                    | Cogs           | SAPH 440 steel          | SAPH 440 steel          | SAPH P&O steel          |   |
|                    | Spider         |                         |                         |                         |   |
|                    | Rivets         |                         |                         | Steel / Zinc Coat       |   |
|                    | Screws         | Steel / Zinc Coat       | Steel / Zinc Coat       |                         |   |
|                    | Finish         | Nickel-Chrome Plated    | Nickel-Chrome Plated    | Nickel-Chrome Plated    |   |



1

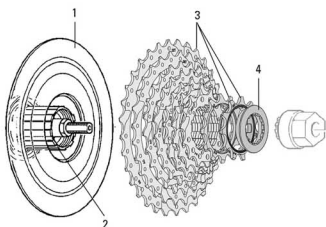

## ASSEMBLY

- Snap spoke protector disc (1, **Fig. 1**) onto the hub flange.
- Fit cassette (3) onto driver profile (2).
- Screw lock nut (4) with cassette tool (Park Tool FR-5 or SRAM Part No. 4624 411 010), tightening torque: 40 Nm (350 in.lbs.).

### Advice:

*Due to the optimized stability of the rear wheel, there is less space between the right spoke flange and the sprocket cassette. This means that not all spoke protector discs available on the market will fit. Please carry out a trial assembly run before specifying spoke protector discs (spoke protector discs must not rub against the sprocket cassette).*

# POWER CHAINS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

POWER CHAINS

|                       | PC 99                                    | PC 89R                                   | PC 69                                    | PC 59                                    | PC 49                                    | NEW |
|-----------------------|------------------------------------------|------------------------------------------|------------------------------------------|------------------------------------------|------------------------------------------|-----|
| Part No.              | —                                        | —                                        | —                                        | —                                        | —                                        |     |
| Application           | MTB                                      | Road                                     | MTB                                      | MTB                                      | MTB                                      |     |
| Compatibility Front   | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           |     |
| Compatibility Rear    | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           | HG / EXA-Drive                           |     |
| Max. No. of sprockets | 9 only                                   | 9 only                                   | 9 only                                   | 9 only                                   | 9 only                                   |     |
| Dimension             | $\frac{1}{2}'' \times \frac{1}{128}''$ * | $\frac{1}{2}'' \times \frac{1}{128}''$ * | $\frac{1}{2}'' \times \frac{1}{128}''$ * | $\frac{1}{2}'' \times \frac{1}{128}''$ * | $\frac{1}{2}'' \times \frac{1}{128}''$ * |     |
| Length                | 6.7 mm                                   | 6.7 mm                                   | 6.7 mm                                   | 6.7 mm                                   | 6.7 mm                                   |     |
| Riveting              | Cross Step                               | Step                                     | Step                                     | Step                                     | Step                                     |     |
| Pin                   | Chrome Hardened                          | Yes                                      | Yes                                      | Yes                                      | Yes                                      |     |
| Push Power            | 2000 N / 450 in.lbs.                     | 1500 N / 340 in.lbs.                     | 1500 N / 340 in.lbs.                     | 1500 N / 340 in.lbs.                     | 1500 N / 340 in.lbs.                     |     |
| Tensile Strength      | 9800 N / 2200 in.lbs.                    | 9800 N / 2200 in.lbs.                    | 9800 N / 2200 in.lbs.                    | 9800 N / 2200 in.lbs.                    | 9800 N / 2200 in.lbs.                    |     |
| Weight (116 links)    | 300 g                                    | 295 g                                    | 300 g                                    | 300 g                                    | 300 g                                    |     |
| Design                |                                          |                                          |                                          |                                          |                                          |     |
| External Pin Plate    | Silver / Nickel Plated                   | Silver / Nickel Plated                   | Silver / Nickel Plated                   | Silver / Nickel Plated                   | Grey / Polished                          |     |
| Internal Pin Plate    | Silver / Nickel Plated                   | Silver / Nickel Plated                   | Silver / Nickel Plated                   | Grey / Polished                          | Grey / Polished                          |     |
| Weight Reduced        |                                          | Yes                                      |                                          |                                          |                                          |     |
| Connecting Method     | Power Link 9SPD                          | Power Link 9SPD or Pin                   | Power Link 9SPD or Pin                   | Power Link 9SPD or Pin                   | Power Link 9SPD or Pin                   |     |

POWER CHAINS

 
 
 
 
 
 
 

 
|                       | PC 68                                   | PC 58                                   | PC 48                                   | PC 38 Saltshaker                        | PC 38                                   |
|-----------------------|-----------------------------------------|-----------------------------------------|-----------------------------------------|-----------------------------------------|-----------------------------------------|
| Part No.              | —                                       | —                                       | —                                       | —                                       | —                                       |
| Application           | MTB                                     | MTB                                     | MTB                                     | MTB                                     | MTB                                     |
| Compatibility Front   | HG / IG / PG / EXA-Drive                | HG / IG / PG / EXA-Drive                | HG / IG / PG / EXA-Drive                | HG / IG / EXA-Drive                     | HG / IG / EXA-Drive                     |
| Compatibility Rear    | HG/HG-IG/IG/PG/EXA-Drive                | HG/HG-IG/IG/PG/EXA-Drive                | HG/HG-IG/IG/PG/EXA-Drive                | HG/HG-IG/IG/PG/EXA-Drive                | HG/HG-IG/IG/PG/EXA-Drive                |
| Max. No. of sprockets | max. 8                                  | max. 8                                  | max. 8                                  | max. 8                                  | max. 8                                  |
| Dimension             | $\frac{1}{2}'' \times \frac{3}{32}''$ * | $\frac{1}{2}'' \times \frac{3}{32}''$ * | $\frac{1}{2}'' \times \frac{3}{32}''$ * | $\frac{1}{2}'' \times \frac{3}{32}''$ * | $\frac{1}{2}'' \times \frac{3}{32}''$ * |
| Length                | 7.1 mm                                  | 7.1 mm                                  | 6.8 mm                                  | 6.9 mm                                  | 6.9 mm                                  |
| Riveting              | Cross Step                              | Step                                    | Step                                    | Step                                    | Step                                    |
| Pin                   | Chrome Hardened                         | Yes                                     | Yes                                     |                                         |                                         |
| Push Power            | 2000 N / 450 in.lbs.                    | 1500 N / 340 in.lbs.                    | 1500 N / 340 in.lbs.                    | 1100 N / 350 in.lbs.                    | 1100 N / 350 in.lbs.                    |
| Tensile Strength      | 9800 N / 2200 in.lbs.                   | 9800 N / 2200 in.lbs.                   | 9800 N / 2200 in.lbs.                   | 9800 N / 2200 in.lbs.                   | 9800 N / 2200 in.lbs.                   |
| Weight (116 links)    | 315 g                                   | 315 g                                   | 305 g                                   | 305 g                                   | 305 g                                   |
| Design                |                                         |                                         |                                         |                                         |                                         |
| External Pin Plate    | Silver / Nickel Plated                  | Silver / Nickel Plated                  | Grey / Polished                         | Grey / Dacromet                         | Grey / Polished                         |
| Internal Pin Plate    | Silver / Nickel Plated                  | Grey / Polished                         | Black / Burnished                       | Grey / Dacromet                         | Brown / Annealed                        |
| Connecting Method     | Power Link S or Pin                     | Power Link S or Pin                     | Power Link S or Pin                     | Power Link G or Pin                     | Power Link G or Pin                     |

POWER CHAINS

|                       | PC 10 Saltshaker                        | PC 10                                   | PC 7X <sup>1</sup>                     | PC 1 Saltshaker                        | PC 1 Ni                                | PC 1     |
|-----------------------|-----------------------------------------|-----------------------------------------|----------------------------------------|----------------------------------------|----------------------------------------|----------|
| Part No.              | —                                       | —                                       | —                                      | —                                      | —                                      | —        |
| Application           | MTB                                     | MTB                                     | BMX / Track                            | Gear Hubs                              | Gear Hubs                              |          |
| Compatibility Front   | HG                                      | HG                                      | Single                                 | Single                                 | Single                                 |          |
| Compatibility Rear    | HG                                      | HG                                      | Single                                 | Single                                 | Single                                 |          |
| Max. No. of sprockets | max. 7                                  | max. 7                                  | 1                                      | 1                                      | 1                                      |          |
| Dimension             | $\frac{1}{2}'' \times \frac{7}{32}''$ * | $\frac{1}{2}'' \times \frac{7}{32}''$ * | $\frac{1}{2}'' \times \frac{1}{8}''$ * | $\frac{1}{2}'' \times \frac{1}{8}''$ * | $\frac{1}{2}'' \times \frac{1}{8}''$ * |          |
| Length                | 6.9 mm                                  | 6.9 mm                                  | 8.2 mm                                 | 7.8 mm                                 | 7.8 mm                                 |          |
| Riveting              | Step                                    | Step                                    | Step                                   | Step                                   | Step                                   |          |
| Pin                   |                                         |                                         |                                        |                                        |                                        |          |
| Push Power            | 1000 N / 225 in.lbs.                    | 1000 N / 225 in.lbs.                    | 1500 N / 340 in.lbs.                   | 800 N / 180 in.lbs.                    | 800 N / 180 in.lbs.                    |          |
| Tensile Strength      | 9800 N / 2200 in.lbs.                   | 9800 N / 2200 in.lbs.                   | 11000 N / 2500 in.lbs.                 | 8000 N / 1800 in.lbs.                  | 8000 N / 1800 in.lbs.                  |          |
| Weight (116 links)    | 305 g                                   | 305 g                                   | 345 g (114 links)                      | 350 g                                  | 350 g                                  |          |
| Design                |                                         |                                         |                                        |                                        |                                        |          |
| External Pin Plate    | Grey / Dacromet                         | Brown / Annealed                        | Gold / Gold Plated                     | Grey / Dacromet                        | Silver /                               | Brown /  |
| Internal Pin Plate    | Grey / Dacromet                         | Brown / Annealed                        | Black / Burnished                      | Grey / Dacromet                        | Nickel Plated                          | Annealed |
| Connecting Method     | Power Link G or Pin                     | Power Link G or Pin                     | 3 pcs. Connecting Link                 | Snap Lock or Pin                       | Snap Lock or Pin                       |          |

<sup>1</sup> PC 7X 114 links only

# POWER CHAINS ASSEMBLY / MAINTENANCE

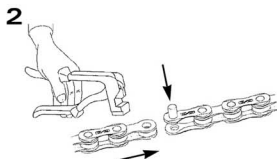

## $\frac{1}{2}'' \times \frac{3}{32}''$ AND $\frac{1}{2}'' \times \frac{11}{128}''$ (DERAILLEURS / SINGLE AND MULTI-SPEED HUBS)

### Chain length:

- Shorten chain to the length specified by the derailleur manufacturer.
- SRAM derailleurs:
- Place chain over largest front chain-wheel and largest rear sprocket and add 2 links or 1 link + Power Link (Fig. 1).
- For rear suspension frame, position the rear suspension for the greatest chain length required.

### Closing standard version with clamping pin:

- Fit chain, bring the two ends together and press pin (Fig. 2) through with assembly tool. The pin must extend by the same amount at both outer plates. It must be possible to move the connecting link slightly.
- The use of the SRAM assembly plier (Part No. 00 2799 980 001) is recommended for PC 68, PC 58 and PC 48.

### Power Link connecting links:

#### Caution:

Use only as specified, to avoid material damage or the rider to fall off his bicycle resulting in injury.

|                 |                                                            |
|-----------------|------------------------------------------------------------|
| Power Link G    | grey coloured<br>for PC 38, PC 10                          |
| Power Link S    | silver coloured<br>for PC 68, PC 58, PC 48                 |
| Power Link 9SPD | gold coloured<br>for PC 99, PC 89R,<br>PC 69, PC 59, PC 49 |

### Closing:

- Fit chain, bring the ends together and insert both halves of the Power Link into the chain ends. (Fig. 3)
- Press both halves of the Power Link together (Fig. 4) and lock in place by pulling the chain apart. (Fig. 5)

### Opening:

- Press both plates of the Power Link together (Fig. 4) while sliding the chain ends together (unlock). Remove the two halves of the link from the chain ends.

### Caution:

Always use a new Power Link when fitting a new chain. Failure to shorten the chain properly or to lock it exactly into place may cause damage to the chain and eventually total chain failure, material damage or the rider to fall off his bicycle resulting in injury.

## PC 1 $\frac{1}{2}'' \times \frac{1}{8}''$ (SINGLE AND MULTI- SPEED HUBS)

### Closing chain with Snap Lock:

- Fit the shortened chain, bring the ends together and connect with the Snap Lock. Place the outer plate on one pin (Fig. 6).
- Gently flex the chain until the outside connector plate snaps into position over the second pin (Fig. 7).

### Caution:

- Make sure plate is fully seated in the pin channel and plates are parallel to each other.
- If movement of the connector plate is noticed a new Snap Lock must be used.
- Always use a new Snap Lock when fitting a new chain. Failure to shorten the chain properly or to lock it exactly into place may cause damage to the chain and eventually total chain failure, material damage or the rider to fall off his bicycle resulting in injury.

## PC 7 X $\frac{1}{2}'' \times \frac{1}{8}''$ (BMX / TRACK)

### Closing chain:

- Fit the shortened chain, bring the two ends together and connect with the chain lock. The chain lock consists of an outer plate with pins (1, Fig. 8), an outer plate (2) and a retaining spring (3).
- Insert outer plate with pins (1) into the chain ends, attach outer plate (2) and press chain lock together (1+2).
- Attach retaining spring (3) with the closed end of the retaining ring pointing in the direction of chain travel (Fig. 9).
- Slide retaining spring in the direction of arrow (4, Fig. 9) to engage it in the grooves in the pins.

## MAINTENANCE


- Regular lubrication will extend the chain's service life.
- Apply oil to the chain rollers and allow to work in.
- Clean dirty chains before oiling. Do not use any grease-dissolving or acidic agents. Cleaning agent must be rinsed off after a few minutes with water.
- Apply oil after chain is completely dried.

# 9.0 DISC BRAKES

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

### Caution:

- *There is a risk of accident if unsuitable forks or frames are used!*
- *The combined mass of the bicycle, the rider, and the load shall be max. 125 kg.*
- *Designed for Cross-Country riding.*  
*Not suitable for tandems, tradesmen's delivery bicycles and similar.*
- *The 9.0 Disc Brakes must go on the left side viewed from behind the rear of the bicycle.*
- *Exclusively use SRAM 9.0 Disc Brake components, spare parts respectively.*

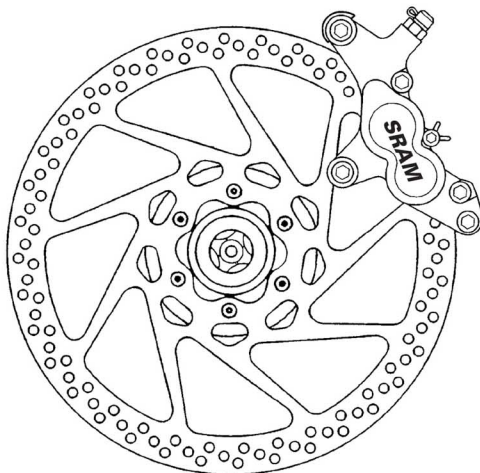

## CALIPER

| NEW                     |               | Brake Caliper                       |
|-------------------------|---------------|-------------------------------------|
| Com-<br>pat-<br>ibility | Part No.      | —                                   |
|                         | Brake Lever   | 9.0 Disc Brake                      |
|                         | Mount Type    | International Standard              |
|                         | Brake Fluid   | DOT 3, DOT 4                        |
| Brake line              | Pistons       | Opposed 4-Pistons, different $\phi$ |
|                         | Material      | Stainless, resin coated             |
|                         | Length, front | 750 mm                              |
|                         | Length, rear  | 1400 mm                             |
|                         | Weight        | N/A                                 |
|                         | Material      | Aluminum                            |

## LEVER

| NEW                     |                   | Brake Lever                                         |
|-------------------------|-------------------|-----------------------------------------------------|
| Brake Caliper Compatib. | Part No.          | —                                                   |
|                         | Lever Size        | 1.5 Finger                                          |
|                         | Reach Adjust      | Yes                                                 |
|                         | Clamping Diameter | 22.3mm                                              |
| Brake Line              | Brake Fluid       | DOT 3, DOT 4                                        |
|                         | Piston Diameter   | Front Lever: $\phi$ 9 mm / Rear Lever: $\phi$ 10 mm |
|                         | Material          | Stainless, resin coated                             |
|                         | Length, front     | 750 mm                                              |
| Finish                  | Length, rear      | 1400 mm                                             |
|                         | Weight            | N/A                                                 |
|                         | Brake Lever       | Aluminum                                            |
|                         | Housing           | Aluminum                                            |

## DISC


| NEW                     |                       | Brake Disc                                           |
|-------------------------|-----------------------|------------------------------------------------------|
| Com-<br>pat-<br>ibility | Part No.              | —                                                    |
|                         | Brake Caliper         | 9.0 Disc Brake                                       |
|                         | Hub                   | see next page, figure 3                              |
|                         | Outer Diameter, front | 160 mm, 180 mm, 185 mm for Post Mount (Manitou) Fork |
|                         | Outer Diameter, rear  | 160 mm                                               |
|                         | Weight                | N/A                                                  |

# 9.0 DISC BRAKES

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS



1

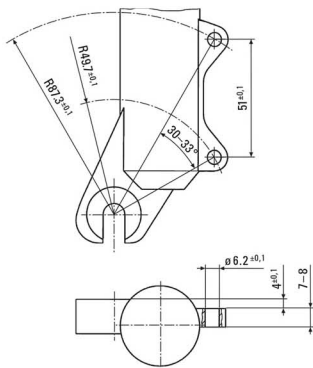

### FRONT FORK REQUIREMENTS

#### Strength:


The strength must be such that with a maximum torque of 300 Nm (2700 in.lbs.) on the wheel no residual deformation can occur on the front fork.

#### Dimensions:

Important dimensions for front forks are shown in **Fig. 1**.

Fork dropouts must be parallel.

2

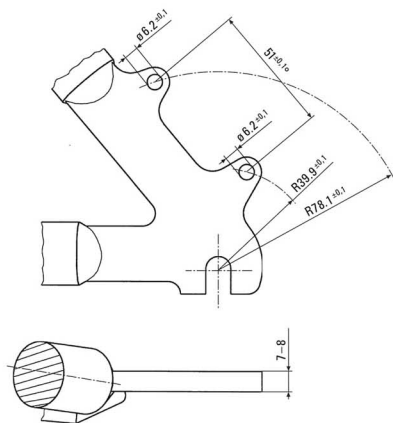

### REAR FRAME REQUIREMENTS

#### Strength:



The strength must be such that with a maximum torque of 250 Nm (2200 in.lbs.) on the rear wheel no residual deformation can occur on the rear structure.

#### Dimensions:

Important dimensions for rear frames are shown in **Fig. 2**.

Rear fork dropouts must be parallel.

3

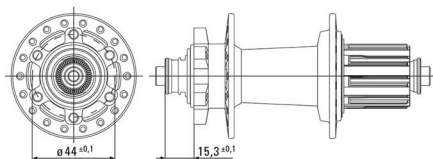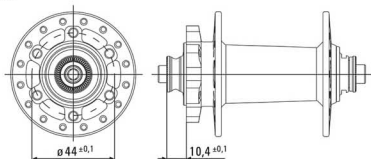

### HUB DIMENSIONS

see **Figure 3**

## 9.0 DISC BRAKES ASSEMBLY

1



2



3



### LACING THE WHEEL

While braking with Disc Brakes, high energies are applied to the spokes. Therefore the spokes must be aligned according to the pictures.

#### Caution:

**At least 3 spoke crossings (no radial alignment of the spokes!)**

#### Front Wheel (Fig. 1):

The heads of the spokes, which are under pulling tension while in braking mode, should be located inwards of the spoke flange.

#### Rear wheel:

##### Drive side (Fig. 2):

The heads of the spokes, which are under pulling tension while in drive mode, should be located inwards of the spoke flange.

##### Brake side (Fig. 3):

The heads of the spokes, which are under pulling tension while in braking mode, should be located inwards of the spoke flange.

4



5



### ASSEMBLY DISC

- Put the brake disc onto the hub of the wheel. Pay attention to the direction of rotation of the disc (Fig. 4).
- Mount the brake disc with the pertaining screws crosswise and at a torque of 5 – 7 Nm (44 – 62 in.lbs).
- Mount the wheel to the frame or fork and tighten it.

### ASSEMBLY BRAKE LEVER

- Mount the brake lever at the handlebar and tighten both screws (1, Fig. 5) equally with a torque of 7 – 11 Nm (62 – 97 in.lbs.).

#### Advice:

- Ensure that the compensation tank is aligned preferably horizontally.
- If the brake lever and the gear shifter interfere with each other, then this must be corrected.

#### Caution:

- The brake levers are designed for use with front or rear wheel brake.
- Only use the brake levers according to the marking on the bottom side of the housings.

"9" = for front wheel brake

"10" = for rear wheel brake

## 9.0 DISC BRAKES ASSEMBLY



6



### ASSEMBLY BRAKE CALIPER

- Insert the wheel.

#### Caution:

*The front wheel quick-release lever must be mounted, so that the lever is not on the brake side.*

- Remove the red brake pad spacer and insert the brake caliper onto the brake disc of the wheel.
- Hold the brake caliper to the receptacle (2, Fig. 6). By hand, turn the fastening screws (3) only 2 – 3 threads.
- Pull the brake lever and hold it at high tension. The brake caliper will be centered. Check the distances between brake caliper and receptacle (Fig. 7). You can choose the necessary spacing washers.
- Insert the spacing washers (Fig. 8) and tighten the screws. Torque of the screws: 10 – 12 Nm (90 – 106 in.lbs.).
- Pull the brake lever once and check if the wheel turns freely.
- If necessary, repeat the centering.

#### Advice:

*If the end of the screw is too close to the brake disc, insert a 2 mm washer directly under the screw head (Fig. 9).*

- Mount the brake line starting from the brake caliper towards the frame or fork.

#### Caution:

*The line may not be bent nor squeezed.*

- Ensure that the line will not be touched by the pedals or by the wheels.
- The bends of the brake line in front of the handlebars must be large enough to allow a complete turn of the handlebar.

#### Caution:

*Before each journey, ensure that all parts of the brake system are functioning correctly.*


8



7



9

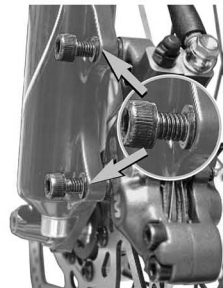

## 9.0 DISC BRAKES MAINTENANCE

1




### BRAKE LEVER REACH ADJUSTMENT

Use a 2 mm inner hexagon wrench (Allen Wrench) (Fig. 1) to adjust the brake lever by:

- Turning the gear limit screw clockwise to increase lever reach.
- Turning the gear limit screw counter-clockwise to reduce lever reach.

2

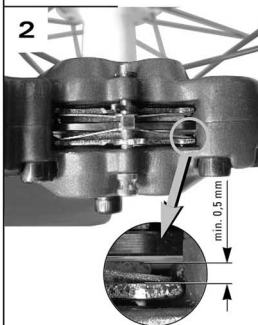

### CHECKING THE BRAKE LINING

**Advice:**  
With the 9.0 Disc Brake System, the brake pads are automatically adjusted with increasing wear.

**Caution:**

- The thickness of the brake lining should be checked regularly.
- The brake pad must be replaced, if the thickness is below 0.5 mm or if the brake pad spring touches the brake disc (Fig. 2).
- To exchange the brake pads, the wheel must be removed.
- Take off the snap ring (1, Fig. 3) and remove the bolt (2).
- Remove the old brake pads and the brake pad spring from the brake caliper.

**Advice:**


*Never activate the brake lever with the wheel removed or with the brake pads removed.*

- Clean the pistons and the surrounding surfaces.


**Caution:**

*Do not turn the pistons while doing so! To clean, only use soap water or a dry cloth. Do not use brake cleaning fluids or mediums to avoid braking noises.*

3

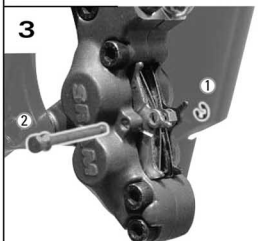

4

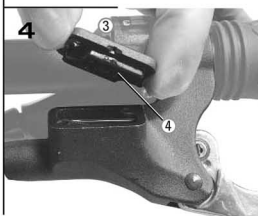

5



- Remove the lid (3, Fig. 4) with the membrane (4) of the compensation tank at the brake lever.

- Carefully push the pistons back without turning or damaging them.

**Caution:**

*While doing so, brake fluid can flow out of the compensation tank.*

**Handling of brake fluid:**

- Spilled brake fluid must be removed immediately to avoid damages.
- Wear safety glasses. Use safety gloves. Contact with brake fluid can lead to severe damages.
- In the case of brake fluid getting into your eyes, rinse thoroughly with water and consult a doctor immediately.
- In the case of brake fluid getting onto your skin, the pertaining skin must be cleaned with soap and water.

- Insert the new brake pads and the brake pad spring. The friction surfaces must face the brake disc.

- Install the bolt (2, Fig. 3) and secure it with the snap ring (1).

- Install the red plastic brake pad spacer (Fig. 5) (if no longer available, install the wheel).

- Operate the brake lever slowly several times to check, if the brake functions correctly and if it shows a hard pressure point. If the response is still poor, the brake system must be bled. Refer to MAINTENANCE AND CARE – BLEEDING THE BRAKE SYSTEM.

- Remove the red brake pad spacer and install the wheel.

- Check the brake fluid level and, if necessary, fill the container to the point that no brake fluid will flow over the container while installing the lid.

**Caution:**

*Only use new type DOT3 or DOT4 brake fluid from a hermetically sealed container.*

- At the brake lever, install the lid with the membrane onto the compensation tank (Fig. 4).  
Torque of the screws: 0.3 – 0.8 Nm (2.7 – 7 in.lbs.).

## 9.0 DISC BRAKES MAINTENANCE



6



7



8



9



### BLEEDING THE BRAKE SYSTEM

#### Caution:

- Only use new type DOT3 or DOT4 brake fluid from a hermetically sealed container.
- While bleeding, refill new brake fluid adequately into the compensation tank in such a way that no air bubbles can reach the system.

- Ensure that the compensation tank at the brake lever is aligned horizontally.
- At the brake lever, remove the lid (1, Fig. 6) with the membrane (2) from the compensation tank.
- At the brake caliper, insert the transparent flexible tubing onto the bleeding screw and place the other end into a suitable container (Fig. 6).
- Slowly pull the brake lever several times and hold it close to the handlebar.
- In this position, slightly open the bleeding screw (3, Fig. 8). Brake fluid and air bubbles flow through the flexible tubing.
- Tighten the bleeding screw again and release the brake lever.
- Repeat this process until the brake fluid flows without bubbles.

- Tighten the bleeding screw (3, Fig. 8) and remove the flexible tubing. Mount the covering cap (4) onto the bleeding screw.
- Fill the compensation tank to the point that no brake fluid will flow over the container while installing the lid.
- At the brake lever, install the lid with the membrane onto the compensation tank. Torque of the screws: 0.3 – 0.8 Nm (2.7 – 7 in.lbs.).

### CLEANING

#### Advice:

- The Disc Brake components are well protected against external environmental factors. High-pressure water for cleaning (e.g. high pressure cleaner or water jet) should not be used to avoid malfunctions due to penetrating water (Fig. 9).
- During the winter season, the bicycle should be cleaned more frequently to avoid any damages caused by de-icing salt.
- Do not use aggressive detergents.
- Do not use brake cleaning solutions or mediums to avoid braking noises.

### TROUBLESHOOTING

| Problem                                                       | Cause                                            | Remedy                                            |
|---------------------------------------------------------------|--------------------------------------------------|---------------------------------------------------|
| The lever produces no effect when moved towards the handlebar | Incorrect bleeding                               | Repeat bleeding                                   |
|                                                               | Leak in the system                               | Check for leaks                                   |
| The disk rubs against the pads                                | The caliper is not properly centred on the disk. | Centre caliper once again                         |
|                                                               | Incorrect span (protruding piston)               | Push the piston into the right position           |
|                                                               | Bent disc                                        | Replace disc                                      |
| Limited braking power                                         | Dirty disc                                       | Clean disc with alcohol                           |
|                                                               | Worn pads                                        | Replace pads                                      |
| Fluid leaks                                                   | Leak in the fitting                              | Tighten the brake line nut or replace the sealing |
|                                                               | Leak in the brake line                           | Replace brake line                                |
|                                                               | Caliper bleed screw loose                        | Tighten the caliper bleed screw                   |

# 9.0 / 7.0 / 5.0 LINEAR PULL BRAKES

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

- Low Flex Truss Arm Design
- Forged Alloy Arms
- Brakecrawler Seal Quick Release
- Easy Adjust Spring Tension
- Single Bolt Pad Adjustment

9.0

|                               |                      |       |             |       |
|-------------------------------|----------------------|-------|-------------|-------|
| <b>9.0</b>                    |                      |       |             |       |
| <b>Part No.</b>               | —                    | —     | —           | —     |
| <b>Brake</b>                  | Front                | Rear  | Front       | Rear  |
| <b>Brake Type</b>             | Linear Pull          |       |             |       |
| <b>Washer Setup</b>           | Inside Thick         |       | Inside Thin |       |
| <b>Brake Shoe</b>             | Cartridge            |       | Cartridge   |       |
| <b>Pad Post Type</b>          | Threaded             |       | Threaded    |       |
| <b>Brake Boss Bolt Length</b> | 16 mm                | 25 mm | 16 mm       | 25 mm |
| <b>Weight</b>                 | N/A                  |       |             |       |
| <b>Arm</b>                    | Forged AL/Anodized ← |       |             |       |
| <b>Pad Holder</b>             | Forged AL/Anodized ← |       |             |       |

7.0

|                               |                      |       |                     |       |
|-------------------------------|----------------------|-------|---------------------|-------|
| <b>7.0</b>                    |                      |       |                     |       |
| <b>Part No.</b>               | —                    | —     | —                   | —     |
| <b>Brake</b>                  | Front                | Rear  | Front               | Rear  |
| <b>Brake Type</b>             | Linear Pull          |       |                     |       |
| <b>Washer Setup</b>           | Inside Thick         |       | Inside Thin         |       |
| <b>Brake Shoe</b>             | Low Profile – 70 mm  |       | Low Profile – 70 mm |       |
| <b>Pad Post Type</b>          | Threaded             |       | Threaded            |       |
| <b>Brake Boss Bolt Length</b> | 16 mm                | 25 mm | 16 mm               | 25 mm |
| <b>Weight</b>                 | N/A                  |       |                     |       |
| <b>Arm</b>                    | Forged AL/Anodized ← |       |                     |       |
| <b>Pad Holder</b>             | Steel ←              |       |                     |       |

5.0

|                               |                      |       |                     |       |
|-------------------------------|----------------------|-------|---------------------|-------|
| <b>5.0</b>                    |                      |       |                     |       |
| <b>Part No.</b>               | —                    | —     | —                   | —     |
| <b>Brake</b>                  | Front                | Rear  | Front               | Rear  |
| <b>Brake Type</b>             | Linear Pull          |       |                     |       |
| <b>Washer Setup</b>           | Inside Thick         |       | Inside Thin         |       |
| <b>Brake Shoe</b>             | Low Profile – 60 mm  |       | Low Profile – 60 mm |       |
| <b>Pad Post Type</b>          | Threaded             |       | Threaded            |       |
| <b>Brake Boss Bolt Length</b> | 16 mm                | 25 mm | 16 mm               | 25 mm |
| <b>Weight</b>                 | 198 g                |       |                     |       |
| <b>Arm</b>                    | Forged AL/Anodized ← |       |                     |       |
| <b>Pad Holder</b>             | Steel ←              |       |                     |       |

### CABLE HOUSING

- Use only new brake cable and cable housing.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.


# 9.0 / 7.0 / 5.0 LINEAR PULL BRAKES ASSEMBLY





1




## LINEAR PULL BRAKE ANATOMY

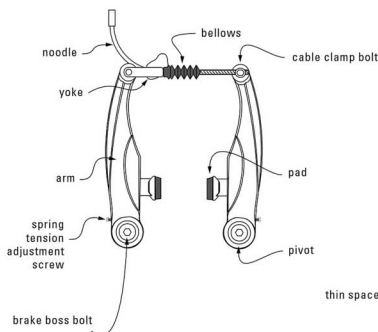

2

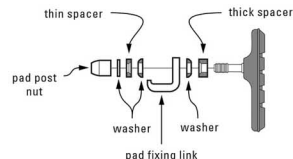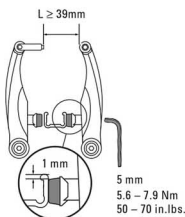

3

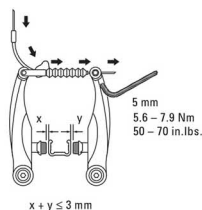

## INSTALLATION

(5.0 Linear-Pull Brakes only:

Do not remove the plastic 'plug' in the pivot. The plug will pop free when the arm is installed onto the brake boss. You may discard the plug!)

- Slide the right linear-pull brake arm (Fig. 1) onto the right brake boss.
- Align the stopper pin with the center-spring hole.
- Using a 5 mm hex wrench, tighten the brake boss bolt to 5.1 – 6.8 Nm (45 – 60 in.lbs.).
- Repeat the former 3 steps for the left arm.
- Arrange the thick and thin spacers – for each pad – so when the pads are pushed against the rim, L is at least 39 mm (Fig. 2).

### Caution:

**Too small dimension L will not allow the brake pads to come into full contact with the rims. The brakes will not work.**


- Hold one pad against the rim using the arm (Fig. 2).
- Using a 5 mm hex wrench, tighten the pad post nut to 5.6 – 7.9 Nm (50 – 70 in.lbs.).
- Repeat the former 2 steps for the other pad.

- Run the brake cable through the noodle and the bellows (Fig. 3).
- Using a 5 mm hex wrench, tighten the cable clamp bolt to 5.6 – 7.9 Nm (50 – 70 in.lbs.).  
Leave a total clearance of 3mm (maximum) between the brake pads and the rim!
- Using a small screw driver, turn the spring tension adjustment screws to balance the arms and equalize the pad offsets (Fig. 4).  
– turn the spring tension adjustment screw clockwise to pull the pad away from the rim.  
– turn the spring tension adjustment screw counterclockwise to push the pad closer to the rim.
- Pull each brake lever – hard – at least 5 – 10 times.

### Caution:

**Check that all the brake system components are functioning properly!**

4

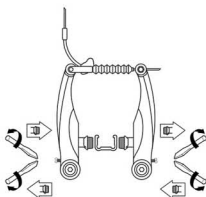

**Be sure to leave about 1 mm between the top of the brake pad and the top of the rim! (Fig. 2)**

**Use only new brake cable and cable housing.**

# 9.0 / 7.0 / 5.0 BRAKE LEVERS

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

9  
·  
0

7  
·  
0


|                     | 9.0                                     |          | 7.0                                     |           |
|---------------------|-----------------------------------------|----------|-----------------------------------------|-----------|
| Part No.            | —                                       | —        | —                                       | —         |
| Brake Lever         | Left                                    | Right    | Left                                    | Right     |
| Lever Size          | 2.5 Finger                              | ←        | 2.5 Finger                              | ←         |
| Brake Compatibility | i-Brake/Linear Pull/Cable Actuated Disc |          | i-Brake/Linear Pull/Cable Actuated Disc |           |
| Leverage Adjust     | Infinite Adjust                         | ←        | 3 Position                              | ←         |
| Cable Pull          | N/A                                     | ←        | 26.0/24.3/22.4                          | ←         |
| Pivot Bushing       | I-Glide                                 | ←        | Acetal                                  | ←         |
| Reach Adjust        | Yes                                     | Yes      | Yes                                     | Yes       |
| Barrel Adjuster     | Indexing                                | Indexing | Lock Ring                               | Lock Ring |
| Clamping Diameter   | 22.3mm                                  | 22.3mm   | 22.3mm                                  | 22.3mm    |
| Weight              | 77 g                                    | 77 g     | 70g                                     | 70g       |
| Housing             | Grilon Composite                        | ←        | Grilon Composite                        | ←         |
| Lever               | Grilon Composite                        | ←        | Grilon Composite                        | ←         |

5  
·  
0

|                     | 5.0                 |           |
|---------------------|---------------------|-----------|
| Part No.            | —                   | —         |
| Brake Lever         | Left                | Right     |
| Lever Size          | 2.5 Finger          | ←         |
| Brake Compatibility | i-Brake/Linear Pull |           |
| Leverage Adjust     | Single Position     | ←         |
| Cable Pull          | N/A                 | ←         |
| Pivot Bushing       | Acetal              | ←         |
| Reach Adjust        | Yes                 | Yes       |
| Barrel Adjuster     | Lock Ring           | Lock Ring |
| Clamping Diameter   | 22.3mm              | 22.3mm    |
| Weight              | 80 g                | 80 g      |
| Housing             | Grilon Composite    | ←         |
| Lever               | Grilon Composite    | ←         |

### Caution:

**SRAM Brake Levers are designed for use with i-Brakes and linear-pull brakes. Do not use SRAM Brake Levers with conventional cantilever brakes (those with arms measuring less than 76 mm and utilizing a non-linear straddle cable). Use of SRAM Brake Levers with conventional cantilever brakesets, drum brakes or roller brakes will result in faulty braking performance.**

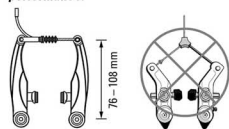


Designed for use with linear-pull brakes.

Do not use conventional cantilever brakes.

### CABLE HOUSING

- Use only new brake cable and cable housing.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

### 7.0 BRAKE LEVER ANATOMY

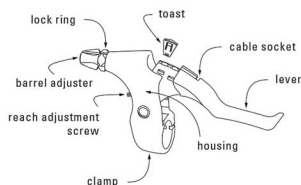

# 9.0 / 7.0 / 5.0 BRAKE LEVERS ASSEMBLY / MAINTENANCE



 
1




2




3




4

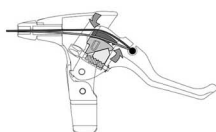

5

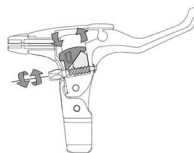

6

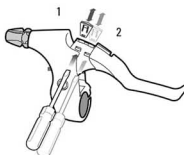

## INSTALLATION

- When sliding the brake lever onto the handlebar, allow enough room for the shifter, the handlebar grip, and the bar end.
- Using a 3 mm hex wrench, tighten the clamp bolt to 3.4 Nm (30 in.lbs.) (Fig. 1/2). **Be careful not to over tighten!**

- Line up the barrel adjuster, the lock ring, and the brake lever housing cable slots.
- Pull on the lever and push the brake cable head through the opening in the brake lever housing (Fig. 2).

**Use only new cable and cable housing.**

- Install the brake cable head into the cable socket in the lever.
- Set up the brakes and brake pads per brake instructions.
- Actuate each brake lever 5 – 10 times.

### Caution:

**Check that all the brake system components are functioning properly!**

## REACH ADJUSTMENT

Using a 2 mm hex wrench (Fig. 3):

- Turn the reach adjustment screw clockwise to bring the lever closer to the handlebars.
- Turn the screw counterclockwise to move the lever further away.

### Caution:

**Do NOT turn the screw past flush with the housing!**

**After any adjustment to the reach always check the brake cable tension to ensure proper brake system performance. Readjust the cable tension if necessary.**

## LEVERAGE ADJUSTMENT

**9.0 Brake Levers only:**

To view the leverage setting (Fig. 4):

Pull the brake lever toward the handlebar to expose the leverage indication window from under the housing. The position of the red indicator shows the brake leverage settings.

- The + sign indicates the highest leverage. Moving the adjuster toward this position increases system leverage. This position has the greatest stopping power for a given amount of effort.
- The - sign indicates the lowest leverage. Moving the adjuster toward this position decreases system leverage. This position is the standard configuration for most braking conditions.

To adjust the leverage setting (Fig. 5):

Use the Control Cam adjuster knob to fine-tune the feel of your levers. The adjuster knob may be positioned at +, - or anywhere in between ...

- Turn the adjuster knob **counter clockwise** to **increase** leverage. This adjustment moves the red indicator

toward the + sign and gives increased leverage and increased stopping power.

- Turn the adjuster knob **clockwise** to **decrease** leverage. This adjustment moves the red indicator toward the - sign and returns the lever to standard leverage and standard stopping power.

**There is positive stop at both ends of the leverage adjustment. Use only hand force to adjust the knob. Do not force the adjustment knob past these stops!**

**7.0 Brake Levers only (Fig. 6):**

- STANDARD LEVERAGE OPTION** – The brake lever is packaged with the toast installed in position 1. This option is the standard configuration for most braking conditions.
- MID LEVERAGE OPTION** – Moving the toast to position 2 gives you greater brake system leverage. This option increases your stopping power for a given amount of effort.
- HIGH LEVERAGE OPTION** – Removing the toast results in the highest brake system leverage. This option has the greatest stopping power for a given amount of effort.

Removing the toast:

1. Remove the brake cable.
2. Insert a small screw driver into the adjuster window.
3. Depress the tab and push the toast out.

Installing the toast:

- 1. Remove the brake cable.
- 2. Determine which option fits your riding needs.
- 3. Align the runner on the toast with the curved track in the lever.
- 4. Press the toast into the slot until it clicks.

### Caution:

**After any adjustment to the reach or leverage, always check the brake cable tension to insure proper brake system performance. Readjust the cable tension if necessary.**

# TWO-AXIS BRAKE LEVER

 
## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

TWO-AXIS

|                     | Two-Axis            |                    |
|---------------------|---------------------|--------------------|
|                     | Left                | Right              |
| Part No.            | —                   | —                  |
| Brake Lever         | Left                | Right              |
| Lever Size          | 4 Finger            | ←                  |
| Brake Compatibility | i-Brake/Linear Pull | ←                  |
| Leverage Adjust     | Single Position     | ←                  |
| Cable Pull          | 28 mm               | ←                  |
| Pivot Bushing       | I-Glide             | ←                  |
| Reach Adjust        | Yes                 | Yes                |
| Barrel Adjuster     | Ergonomic Indexing  | Ergonomic Indexing |
| Clamping Diameter   | 22.3 mm             | 22.3 mm            |
| Weight              | 155 g               | 155 g              |
| Housing             | Grilon Composite    | ←                  |
| Lever               | Forged Aluminum     | ←                  |

### Caution:

SRAM Brake Levers are designed for use with i-Brakes and linear-pull brakes. Do not use SRAM Brake Levers with conventional cantilever brakes (those with arms measuring less than 76 mm and utilizing a non-linear straddle cable). Use of SRAM Brake Levers with conventional cantilever brakesets, drum brakes or roller brakes will result in faulty braking performance.



Designed for use with linear-pull brakes.



Do not use conventional cantilever brakes.


### CABLE HOUSING

- Use only new brake cable and cable housing.
- When choosing cable housing lengths, be sure to allow enough housing for an extreme turn of the handlebars in both directions.
- Note also, that different stem lengths and cable stop positions effects cable housing length.

# TWO-AXIS BRAKE LEVER ASSEMBLY / MAINTENANCE



## BRAKE LEVER ANATOMY

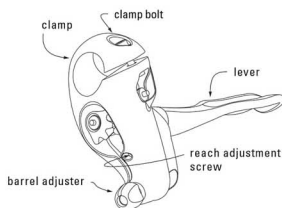

## INSTALLATION

- When sliding the brake lever onto the handlebar, allow enough room for the shifter, the handlebar grip, and the bar end.
- Using a 3 mm hex wrench, tighten the clamp bolt to 3.4 Nm (30 in.lbs.) (Fig. 1).  
**Be careful not to over tighten!**
- Line up the barrel adjuster and the brake lever housing cable slots.
- Pull on the lever and push the brake cable head through the opening in the brake lever housing (Fig. 2).
- Install the brake cable head into the cable socket in the lever.
- Set up the brakes and brake pads per brake instructions.
- Actuate each brake lever 5 – 10 times.

## REACH ADJUSTMENT


Using a 2 mm hex wrench (Fig. 3):

- Turn the reach adjustment screw clockwise to bring the lever closer to the handlebars.
- Turn the screw counterclockwise to move the lever further away.

### Caution:

**After any adjustment to the reach always check the brake cable tension to ensure proper brake system performance. Readjust the cable tension if necessary.**


1

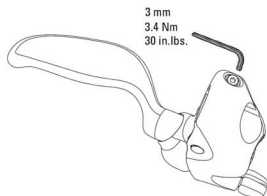


### Caution:

**Check that all the brake system components are functioning properly!**

2

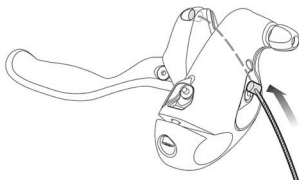

3

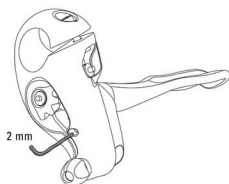



# SMARTBAR

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS

- New Style
- ErgoFit – allows for height, reach, and rise adjustment
- ErgoFunction – improved control, enhanced ergonomics and safety
- Upgradeable – full suite of integrated accessories



### QUILL


| SmartBar Quill Stem |                      |   |   |   |   |   |   |   |
|---------------------|----------------------|---|---|---|---|---|---|---|
| Shifter             | Part No.             | — | — | — | — | — | — | — |
|                     | Stem diameter 1"     | ● | ● | ● | ● |   |   |   |
|                     | Stem diameter 1 1/8" |   |   |   | ● | ● | ● | ● |
|                     | Rear, 9spd           | ● | ● |   | ● | ● |   |   |
|                     | Rear, 8spd           |   |   | ● | ● |   | ● | ● |
|                     | Front, Micro Adjust  | ● |   | ● | ● |   | ● |   |
|                     | Front, Index         |   | ● |   | ● |   | ● | ● |

### CLAMP

| SmartBar Clamp-On Stem |                      |   |   |   |   |   |   |   |
|------------------------|----------------------|---|---|---|---|---|---|---|
| Shifter                | Part No.             | — | — | — | — | — | — | — |
|                        | Stem diameter 1"     | ● | ● | ● | ● |   |   |   |
|                        | Stem diameter 1 1/8" |   |   |   | ● | ● | ● | ● |
|                        | Rear, 9spd           | ● | ● |   | ● | ● |   |   |
|                        | Rear, 8spd           |   |   | ● | ● |   | ● | ● |
|                        | Front, Micro Adjust  | ● |   | ● | ● |   | ● |   |
|                        | Front, Index         |   | ● |   | ● |   | ● | ● |

# SMARTBAR

## ASSEMBLY ERGOFIT STEM (QUILL STEM)

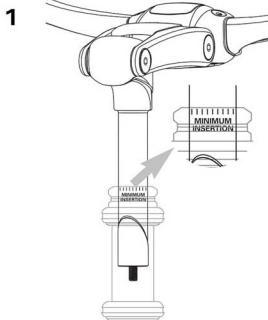



**Caution:**  
*The SmartBar requires a knowledgeable and trained bicycle mechanic for proper installation and adjustment. To ensure rider safety, all stem adjustments should be made by a trained mechanic using a calibrated torque wrench to verify required tightening torque.*

- Lightly grease the outside of the stem quill tube below the MINIMUM INSERTION mark before assembly.
- Slide the stem into the steerer tube of the front fork making sure that it is inserted past the "MINIMUM INSERTION" mark on the stem quill (Fig. 1).
- Align the SmartBar assembly so that the stem centerline is in line with the centerline of the front wheel (Fig. 2).

- Rotate the elastomer quill cover upward to allow access to the 6 mm hex wedge bolt (Fig. 3).
- Tighten the 6 mm hex wedge bolt to 20 – 30 Nm (177 – 270 in.lbs.).

**Caution:**


- *Always check that the stem cannot slip up/down or rotate in/on the steerer tube when the handlebars are turned.*
- *If the handlebars can be turned so that the stem does not line up with the front wheel, check and re-tighten the hex wedge bolt.*
- *Re-tighten and check again for proper attachment and operation!*

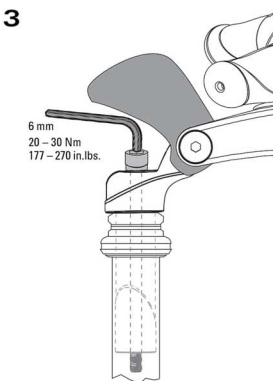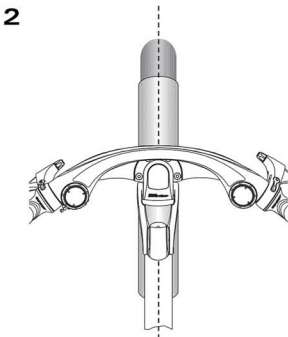

# SMARTBAR ASSEMBLY ERGOFIT STEM (CLAMP-ON STEM)



4

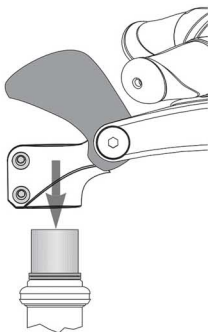

**Caution:**  
*The SmartBar requires a knowledgeable and trained bicycle mechanic for proper installation and adjustment. To ensure rider safety, all stem adjustments should be made by a trained mechanic using a calibrated torque wrench to verify required tightening torque.*

- Make sure that there is at least 37 mm of threadless steerer tube above the headset (and spacers) for clamping the stem.

**Advice:**  
*Use several headset spacers between the headset and stem to allow for more height adjustment.*

- Slide the stem over the steerer tube of the front fork (Fig. 4).
- Make sure that the top of the stem clamp is no more than 5 mm above the top of the steerer tube (Fig. 6).
- Align the SmartBar assembly so that the stem centerline is in line with the centerline of the front wheel (Fig. 5).

- Rotate the elastomer quill cover upward to allow installation of the headset top cap and access to the two 5 mm hex clamp bolts (Fig. 6).


**Advice:**  
*Adjust the headset bearings and top cap tension following the headset manufacturers' recommendations.*

- Tighten the two 5 mm hex clamp bolts to 15 – 20 Nm (133 – 177 in.lbs) (Fig. 6).


**Caution:**

- *Always check that the stem cannot slip up/down or rotate in/on the steerer tube when the handlebars are turned.*
- *If the handlebars can be turned so that the stem does not line up with the front wheel, check and re-tighten the hex clamp bolts.*
- *Re-tighten and check again for proper attachment and operation!*

5

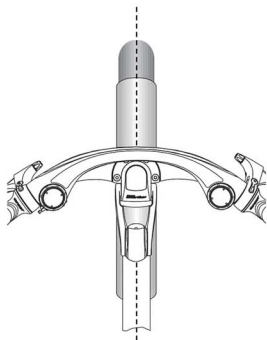


6

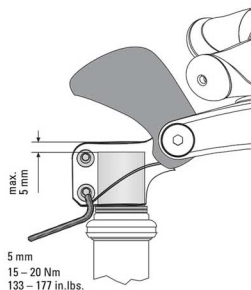

# SMARTBAR

## ADJUSTMENT ERGOFIT STEM (REACH ADJUSTMENT)

7

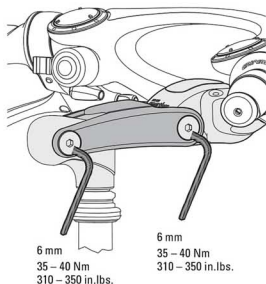

The ErgoFit stem has two rotating adjustment bolts and a "Flip-Flop" design that allow for a very wide range of adjustments.

### FORE-AFT POSITION

- To fine-tune the fore-aft position of the handgrips adjust the ErgoFit rotation adjustments (**Fig. 7**).
- Loosen the two 6 mm hex adjustment bolts just enough that the links can be rotated freely.
- Rotate the main structure and links forward and down or backward and up until the desired fore-aft position is achieved. Choose any one of the locking positions that are evenly spaced in 15-degree increments (**Fig. 8**).
- Tighten the 6 mm hex **rear** adjustment bolt just enough to hold the desired position.
- Rotate the main structure and grips so that lower flat section of the main structure is nearly level with the ground and the gear indicators are clearly visible from the riding position. Locking positions are evenly spaced in 15-degree increments (**Fig. 9**).


- Tighten the 6 mm hex **front** adjustment bolt to 35 - 40 Nm (310 - 350 in.lbs) (**Fig. 7**).

- Tighten the 6 mm hex **rear** adjustment bolt to 35 - 40 Nm (310 - 350 in.lbs).


### Caution:

- **Always check that the stem rotation adjustments cannot be rotated up or down after tightening.**
- **If the handlebars can be moved up or down or rotated forward or backward after tightening the adjustment bolts, check and re-tighten both the adjustment bolts making sure that they are in one of the locking positions.**
- **Re-tighten and check again for proper attachment and operation!**

8

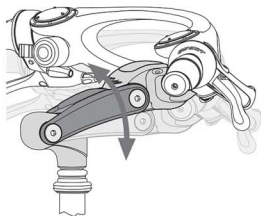



9

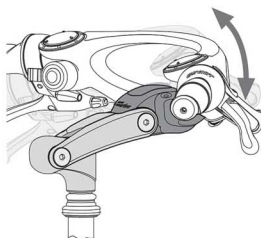

# SMARTBAR ADJUSTMENT ERGOFIT STEM (REACH ADJUSTMENT)



10

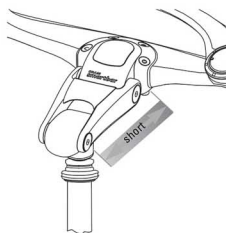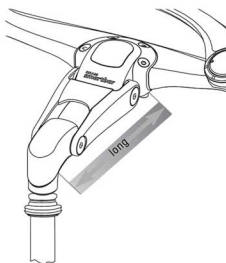

## FLIP-FLOP POSITION

- To make a large change to the fore-aft position adjust the "Flip-Flop" position to **long** or **short** adjustment (**Fig. 10**).
- Loosen the 6 mm hex wedge bolt or the two 5 mm hex clamp bolts to allow the stem to rotate freely on the steerer tube (**Fig. 3 / Fig. 6**).
- Loosen the two 6 mm hex adjustment bolts just enough that the links can be rotated freely (**Fig. 11**).
- Loosen the 6 mm hex rear adjustment bolt and **remove** the bolt completely.

### Advice:

*You will have to support the main structure while you make this change.*


- Change the Flip-Flop stem quill or stem clamp 180 degrees to the desired short or long position.
- Re-insert the 6 mm hex rear adjustment bolt and tighten just enough to hold the desired position.
- Follow the prior instructions to fine-tune the fore-aft position.
- Tighten the 6 mm hex front adjustment bolt to 35 – 40 Nm (310 – 350 in.lbs).

- Tighten the 6 mm hex rear adjustment bolt to 35 – 40 Nm (310 – 350 in.lbs).
- Align the SmartBar assembly so that the stem centerline is in line with the centerline of the front wheel (**Fig. 2 / Fig. 5**).
- Quill stem: Tighten the 6 mm hex wedge bolt to 20 – 30 Nm (177 – 270 in.lbs) (**Fig. 3**).
- Clamp-On stem: Tighten the two 5 mm hex clamp bolts to 15 – 20 Nm (133 – 177 in.lbs) (**Fig. 6**).

### Caution:


- Always check that the stem rotation adjustments cannot be rotated up or down after tightening.**
- If the handlebars can be moved up or down or rotated forward or backward after tightening the adjustment bolts, check and re-tighten both the adjustment bolts making sure that they are in one of the locking positions.**
- Re-tighten and check again for proper attachment and operation!**

11

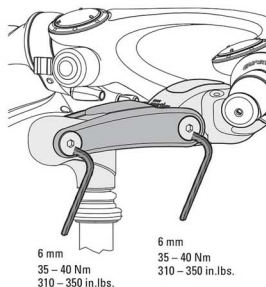

# SMARTBAR ADJUSTMENT ERGOFIT STEM (HEIGHT ADJUSTMENT)

12

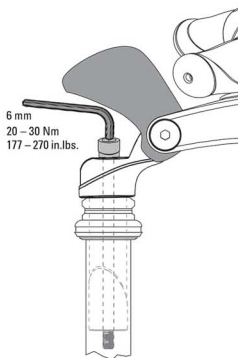


To fine tune the up-down position of the handgrips of a quillstem SmartBar adjust the stem up or down on the steerer tube.

- Loosen the 6 mm hex wedge bolt (**Fig. 12**).
- Move the stem to the desired position up or down making sure that it is inserted past the "MINIMUM INSERTION" mark on the stem quill (**Fig. 13**).
- Align the SmartBar assembly so that the stem centerline is in line with the centerline of the front wheel (**Fig. 14**).
- Tighten the 6 mm hex wedge bolt to 20 – 30 Nm (177 – 270 in.lbs) (**Fig. 12**).


## Caution:

- **Always check that the stem cannot slip up/ down or rotate in/on the steerer tube when the handlebars are turned.**
- **If the handlebars can be turned so that the stem does not line up with the front wheel, check and re-tighten the hex wedge bolt or hex clamp bolts.**
- **Re-tighten and check again for proper attachment and operation!**

13

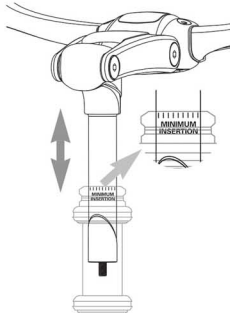


14

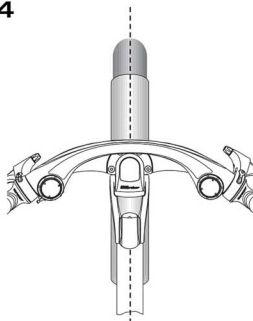

# SMARTBAR ADJUSTMENT CONTROL POD



15

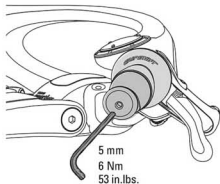

Verify that the rotational position of the brake levers is desired as assembled.

If no position change is required:

- Insert a 5 mm hex wrench into the hole in the end of the handgrip. Tighten the 5 mm hex bolt to 6 Nm (53 in.lbs) (Fig. 15).

If a different position is desired:

- Insert a 5 mm hex wrench into the hole in the end of the handgrip (Fig. 15). Loosen the bolt five complete turns. This is enough to allow the control pod to be pulled a few millimeters away from the main structure without disassembly of the control pod unit.

## Caution:


### Do NOT disassemble the control pod!

The gear indication cables are set at the factory, and improper disassembly will damage the gear indication cables and function.

## Caution:


- Do NOT rotate the control pod assembly outside of the allowed adjustment range of 20 – 60 degrees down from horizontal (Fig. 17)!
- Rotating the pods beyond their allowed adjustment range will damage the gear indication cables and function.
- The pods can be adjusted in increments of 10 degrees within the range of 20 – 60 degrees down from horizontal.
- Once desired position is determined tighten the 5 mm hex bolt to 6 Nm (53 in.lbs) (Fig. 15).

16

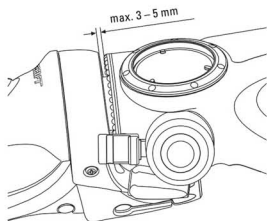


- Pull the control pod slightly away (3 – 5 mm) from the main structure and rotate to the desired position (Fig. 16).

17

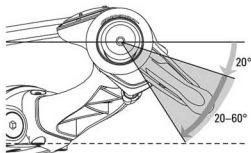


## SMARTBAR ASSEMBLY BRAKE CABLE

18

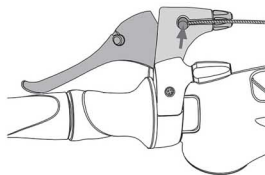


- Line up the barrel adjuster with the slot in the underside of the control pod housing.
- Pull on the brake lever and push the cable head through the opening in the brake lever housing (**Fig. 18**). Use only new cable and housing.
- Install the cable head into the cable socket in the brake lever (**Fig. 19**).
- Set up the brakes and brake pads per brake instructions.
- Actuate each brake lever 5 – 10 times and ensure proper operation.

19

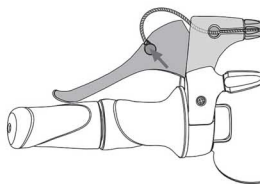

## SMARTBAR BRAKE LEVER REACH ADJUSTMENT

20

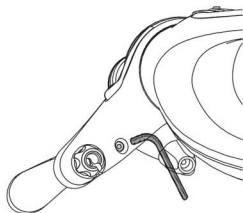

Using a 2 mm hex wrench.

- Turn the reach adjustment screw clockwise to bring the lever closer to the handgrip (**Fig. 20**).
- Turn the screw counterclockwise to move the lever further away.
- Actuate each brake lever 5 – 10 times and ensure proper operation.


### **Caution:**

- **Do NOT force the screw past its normal stop!**
- **After any adjustment to the reach always check the brake cable tension to ensure proper brake system performance.**
- **Readjust the cable tension if necessary.**

# SMARTBAR ASSEMBLY SHIFTER CABLE INSTALLATION



21

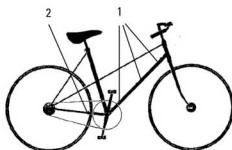

## 24spd and 27spd ESP systems

- Feed the cable through the cable housing and stops.
- Attach the cable to the derailleur. Use only new cable and housing.
- Adjust indexing per derailleur instructions.

## 7 Speed Spectro Gearhubsystems

- The cable, housing and Clickbox are pre-assembled at the factory.

**Advice:**  
**When fitting the cable avoid small radius.**


- See figure for cable attachment points (1, **Fig. 21**).
- Last attachment point is on the lower rear wheel fork (2, **Fig. 21**) immediately behind the chain wheel.

**Advice:**  
**Cable housing must be movable inside attachment.**

- CLICKBOX INSTALLATION AND ADJUSTMENT per Technical Manual / Spectro S7.

# SMARTBAR ADJUSTMENT GEAR INDICATION

22

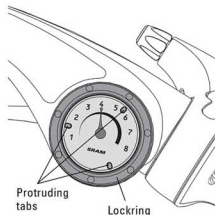

**Caution:**  
**Do NOT disassemble the gear indication display!**

The gear indicators and cables are set at the factory and improper disassembly will damage the gear indication and its function. In the event of external damage or adjustment problems not solved by the following procedures, please call technical service for detailed repair instructions.

- Check all gears are shifting well, shift the derailleur or internal gear hub into the middle gear:

Gear 4 = middle gear for 7spd internal hub

Gear 4 = 4<sup>th</sup> largest sprocket on 8spd cassette


Gear 5 = 5<sup>th</sup> largest sprocket on 9spd cassette

Gear 2 = middle chainring for front derailleurs with triple chainrings (left side gear indication).

- While holding the locking stationary turn the clear gear indication dome until the middle gear number is exactly lined up with the gear indicator needle.
- Use the three protruding tabs on the clear gear indication dome to turn the dome and the gear display beneath it while holding the locking stationary (**Fig. 22**).

# SMARTBAR GRIP REPLACEMENT

23

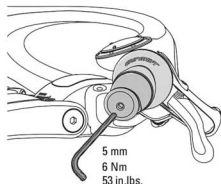

## STATIONARY GRIP:

### Removal

- Rotate the shifter fully in the cable release direction. (Gear "1" on the front shifter, gear "1" on the Spectro 7spd shifter, gear "8" on the 8spd shifter, and gear "9" on the 9spd shifter).

### Caution:

**Do NOT disassemble the control pod!**

- The gear indication cables are set at the factory, and improper disassembly will damage the gear indication cables and function.

- Insert a 5 mm hex wrench into the hole in the end of the handgrip (Fig. 23).

- While pressing the twist grip toward the center of the handlebar, unscrew the bolt completely until the stationary grip can be pulled straight off (Fig. 24).

### Replacement

- Align the flat keyed feature on the new stationary grip assembly with the flat keyed feature on the end of the SmartBar and push the grip assembly onto the SmartBar until it makes contact with the spacer tube (Fig. 24).

- Tighten the 5 mm hex bolt to 6 Nm (53 in.lbs) (Fig. 23).

## TWIST GRIP:


### Removal

- Remove stationary grip, see left.
- Pull the spacer tube straight off the SmartBar (Fig. 24).
- Next, while pressing the control pod housing toward the center of the handlebar, slowly pull the twist grip straight off, taking care to keep the coil spring from falling out.


### Replacement

- Slide new twist grip over SmartBar.
- Slide the spacer tube back onto the SmartBar and part way through the new grip, making sure that the flange is on the outboard side toward the stationary grip (Fig. 24).
- Replace rear end of coil spring onto spring tab of new grip (Fig. 25).
- While sliding the grip towards the housing, align the free end of the spring into the spring cavity in the spool (already in the housing).
- Push the spacer tube all the way into the grip assembly.
- Rotate grip forward slightly compressing the coil spring and push the grip towards the housing until there is no gap between the housing and grip.
- Align the flat keyed feature on the stationary grip assembly with the flat keyed feature on the end of the SmartBar and push the grip assembly onto the SmartBar until it makes contact with the spacer tube (Fig. 24).
- Tighten the 5 mm hex bolt to 6 Nm (53 in.lbs) (Fig. 23).

24

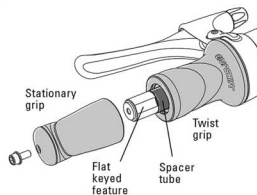


25

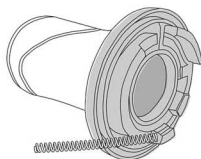





26

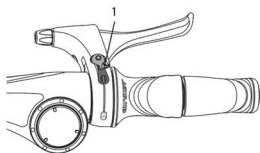


27

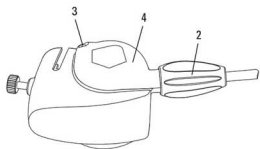

28

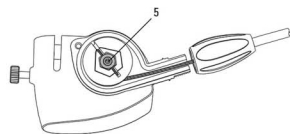

29

 

## 24SPD & 27SPD ESP SYSTEMS

### Removal

- Detach the cable from the derailleur.
- Cut cable off 15 cm (6") from shifter barrel adjuster. Discard old cable and housing.
- From the top edge pull open the cable change hatch (1, **Fig. 26**).
- Rotate the shifter fully in the cable release direction. (Gear "1" on the front shifter, gear "8" on the 8spd shifter, and gear "9" on the 9spd shifter.)
- Look for cable head and push cable up / out of the shifter and discard (**Fig. 26**).

### Replacement

- Feed the new cable through the cable entry and out the barrel adjuster. Be sure to thread the cable through the small hole in the spool.
- Pull the cable snug to seat the cable head in the shifter.
- Replace the cable change hatch.
- Feed the cable through the new cable housing and frame stops.
- Attach the cable to the derailleur.
- Adjust indexing per derailleur instructions.

## 7 SPEED SPECTRO GEARHUB SYSTEMS

### Removal

- Rotate the shifter fully in the cable release direction. Gear position "1".
- Do not remove the Clickbox from the axle end.
- Unscrew the barrel adjuster (2, **Fig. 27**) completely.
- Unscrew bolt (3, **Fig. 27**), remove cap (4).

- Withdraw shifter cable and clamping bolt (5, **Fig. 28**) upwards, loosen clamp and pull clamping piece from the cable.
- From the top edge pull open the cable change hatch (1, **Fig. 26**)
- Look for cable head and push cable up / out of the shifter and discard.

### Replacement

- Feed the new cable through the cable entry and out the barrel adjuster.
- Pull the cable snug to seat cable head in the shifter.
- Replace the cable change hatch.
- Feed the cable through the new cable housing and adjusting barrel.
- Position clamping bolt at a distance of 93 mm, tighten to 1.5 Nm (13 in.lbs.) and cut off cable end to 2 – 3 mm (**Fig. 29**).
- Locate clamping bolt (5, **Fig. 28**) (screw head not visible) and place shifter cable around carrier cylinder (counter-clockwise winding).
- Position cap (4, **Fig. 27**) and tighten with bolt (3), torque 0.35 – 0.45 Nm (3.1 – 4.0 in.lbs.).

- Screw the barrel adjuster (2) completely onto the clickbox.

- CLICKBOX INSTALLATION AND ADJUSTMENT per Technical Manual Gear Hub Systems / Spectro S7.

## CLEANING

- Clean all parts with soapy water only.
- It is recommended that you clean the bike in an upright position, this allows the water to drain out correctly.
- After cleaning, if moisture does impair the clarity of the gear indication lens cap it is not recommended to remove the lens, instead leave your bike in a warm dry room, until the moisture disappears from the lens.



# NIGHTCRAWLER / BRAKECRAWLER

## TECHNICAL DATA / ASSEMBLY REQUIREMENTS




### SEALS

|                        | Nightcrawler            | Brakecrawler                              |         |                 |         |
|------------------------|-------------------------|-------------------------------------------|---------|-----------------|---------|
| Part No.               | —                       | —                                         | —       | —               | —       |
| Type                   | Cable Seal              | Sealing Quick Release                     | ←       | ←               | ←       |
| Cable Type             | Deraillleur Cables Only | Brake Cables Only                         | ←       | ←               | ←       |
| Cable Size             | 1.1 mm / 1.2 mm         | 1.6 mm                                    | ←       | ←               | ←       |
| Housing                | Compressionless         | Compressionless or Standard Brake Housing | ←       | ←               | ←       |
| Housing Ferrule/Max.   | 5.8 mm                  | 5.8 mm                                    | ←       | ←               | ←       |
| Cable Stop/Slit Minim. | 2.1 mm                  | 2.2 mm                                    | ←       | ←               | ←       |
| Guide Pipe             |                         | Chrome Plated                             | ←       | Stainless Steel | ←       |
| Bend                   |                         | 90°                                       | 130°    | 90°             | 130°    |
| Weight                 | 6g                      | N/A                                       |         | N/A             |         |
| Rigger                 | Acetal                  | Acetal                                    | Acetal  | Acetal          | Acetal  |
| Bellows                | Silicon                 | Silicon                                   | Silicon | Silicon         | Silicon |


Design

## NIGHTCRAWLER


1

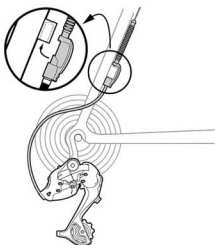

2

 

### ANATOMY

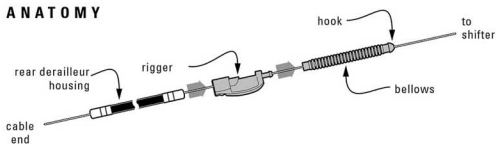

### COMPATIBILITY

- Fits most frames
- Use with derailleur cables ONLY

### SETUP

- No tools needed
- Cable detached from the rear derailleur
- Rigger separate from the bellows

### INSTALLATION

(see figure 1)

- Feed the cable through the bellows – hook end first.
- Feed the cable through the rigger – bellows end first.

- Join the rigger to the bellows.
- Feed the cable through the rear derailleur housing.
- Seat the rear derailleur housing into the rigger.
- Slide the rigger into the rear derailleur cable stop.
- Re-attach the cable to the rear derailleur.
- Check that the chain is on the smallest cog.
- Using your fingers, slide the hook end of the bellows towards the rigger until fully compressed (fig. 2).

## BRAKECRAWLER

1



### Features and Benefits:

- Complete cable sealing.
- Maintains smooth braking performance in all conditions.
- Easy to grab quick release finger tab: allows for easy wheel removal.
- Integrated bellows design: bellows stays attached even during wheel removal and replacement.

### Detailed specifications:

- Fits SRAM, Shimano and most other linear pull brakes.
- Replaces existing noodle guide tube and bellows.
- Stainless steel or Chrome plated.
- 90 degree or 130 degree bend.









# SUPPORT DISTRIBUTORS

## UNITED STATES

Action Bicycle USA  
217 Washington Avenue - A  
Carlstadt, NJ, 07072  
Ph: +1 800.284.2453

Bicycle Tech International  
3201 B Richards Lane  
Sante Fe, NM, 87505  
Ph: +1 800.558.8324

DiamondBack, Distributor  
300 Camarillo Ranch Rd.  
Camarillo, CA, 93012  
Ph: +1 800.776.7641

Downeast Bicycle Specialists  
Porter Road, P.O. Box 226  
Fryeburg, ME, 04037  
Ph: +1 800.242.1043

Euro-Asia Imports  
3935 FootHill  
La Crescenta, CA, 91214  
Ph: +1 818.248.1814

Giant Bicycle, Inc.  
737 W. Artesia Boulevard  
Rancho Dominguez, CA, 90220  
Ph: +1 800.874.4268

Great Northwest  
2335 North West Savier  
Portland, OR, 97210  
Ph: +1 800.927.9242

Hans Johnsen Company  
8901 Chancellor Row  
Dallas, TX, 75248-5326  
Ph: +1 800.879.1515

The Hawley Company  
One Hawley Drive  
Lexington, SC, 29074-7812  
Ph: +1 800.822.1980

Island Cycle Supply  
425 Washington Avenue North  
Minneapolis, MN, 55401  
Ph: +1 800.627.2453

J&B Importers, Inc.  
P.O. Box 161859  
Miami, FL, 33116-1859  
Ph: +1 800.666.5000

J&B Importers West, Inc.  
P.O. Box 1248  
Englewood, CO, 80150  
Ph: +1 800.999.9228

J&B Importers Pacific, Inc.  
P.O. Box 88808  
Seattle, WA, 98138-2808  
Ph: +1 800.627.2453

KHS Inc., Distributor  
1264 East Walnut Street  
Carson, CA, 90746  
Ph: +1 800.347.7854

The Merry Sales Company  
1415 San Mateo Avenue  
San Francisco, CA, 94080  
Ph: +1 800.245.9959

Olympic Cycle Supply  
5711 West Douglass Avenue  
Milwaukee, WI, 53218  
Ph: +1 800.236.8380

Performance Cycle Products  
22 South 6th Avenue  
Mount Vernon, NY, 10550  
Ph: +1 888.269.1846

Quality Bicycle Products  
6400 West 105th Street  
Bloomington, MN, 55438  
Ph: +1 800.346.0004

Quantum  
400 Venture Court, Suite 101  
Verona, WI, 53593-1821  
Ph: +1 800.545.1229

Quentin  
454 Scott Drive  
Bloomington, IL, 61008  
Ph: +1 800.323.1741

Raleigh Bicycle Co., USA  
22710 72nd Avenue South  
Kent, WA, 98032  
Ph: +1 800.222.5527

Riteway Products  
2001 East Dyer  
Santa Ana, CA, 92705-5709  
Ph: +1 800.869.9866

Schwinn Cycling and Fitness  
1690 38th Street  
Boulder, CO, 80301  
Ph: +1 800.SCHWINN

Seattle Bike Supply  
7620 South 192nd  
Kent, WA, 98032  
Ph: +1 800.955.2453

Security Bicycle  
32 Intersection Street  
Hempstead, NY, 11550-1332  
Ph: +1 800.645.2990

Sinclair Imports  
2755 Highway 40  
Verdi, NV, 89439  
Ph: +1 800.654.8052

Trek Bicycle Corporation  
801 West Madison St.  
Waterloo, WI, 53594-0183  
Ph: +1 800.369.8735

United Bicycle Parts  
691 Washington Street  
Ashland, OR, 97520  
Ph: +1 800.482.1984

Wilson Bicycle Sales  
31157 Wiegman Road  
Hayward, CA, 94544  
Ph: +1 800.877.0077

World Wide Cycle Supply  
100 D Executive Drive  
Edgewood, NY, 11717  
Ph: +1 800.330.2550

## EUROPE

### AUSTRIA

KTM Fahrrad GmbH  
Harlochnerstrasse 13  
5230 Mattighofen  
Ph: +43 7742 409 132  
Fx: +43 7742 409 126

### BELGIUM

Transmission S.A.  
Boulevard du Centenaire 4  
1325 Dion-Valmont  
Ph: +32 10 24 46 46  
Fx: +32 10 24 47 77

### CZECH REPUBLIC

Vokolek Import  
Rezlerova 308  
10900 Praha-Petrovice  
Ph: +420 2692 3399  
Fx: +420 2692 3399

Zitny  
Ceskokobratrsk Nam. 133  
29301 Mlada Boleslav  
Ph: +420 326 72 22 14  
Fx: +420 326 72 22 14

### DENMARK

Dan Agentur  
Stationsvej 77  
5792 Arslav  
Ph: +45 65 99 24 11  
Fx: +45 65 99 28 42

### FINLAND

J. Syväranta Oy  
Nervanderinkatu 5E 47/PL 64  
F-00101 Helsinki  
Ph: +358 9 480 137  
Fx: +358 9 483 890

## FRANCE

Savoye, S.A.  
Rue de l'Industrie  
1470 Serrières de briord  
Ph: +33 4 74 36 13 77  
Fx: +33 4 74 36 15 14

Lapierre Cycles S.A.  
Eurostar  
SUNN

## GERMANY

Hartje KG  
Deichstraße 120-122  
27318 Hoya  
Ph: +49 42 51 81 11 15  
Fx: +49 42 51 81 12 49

Epple Zweirad GmbH  
Mittereschweg 1  
87700 Memmingen  
Ph: +49 83 31 7 51 41  
Fx: +49 83 31 7 51 97

Bico  
E. Wiener Bike parts  
GZR  
Rabeneick/Schlothe  
Veloring  
ZEG

## GREECE

Gatsoulis Imports  
8, Thessalonikis Street  
14342 New Filadelfia-Athens  
Ph: +30 1 25 12 779  
Fx: +30 1 25 33 960

## HUNGARY

Biker Kft.  
Gyepsor u. 1  
1211 Budapest  
Ph: +36 1278 1021  
Fx: +36 1278 1023

## ICELAND

Oerninn Hjol LTD.  
P.O. Box 8036, Skeifan 11  
Reykjavik  
Ph: +354 1 88 98 92  
Fx: +354 5 88 98 96

## ITALY

A.M.G. S.r.l.  
Via Piave 10  
23871 Lomagna (Como)  
Ph: +39 039 5 30 11 67  
Fx: +39 039 9 22 02 70

## NETHERLANDS

Koch Kleeberg B.V.  
Postbus 1069, Dukkalfweg 25  
1300 BB Almere  
Ph: +31 36 532 05 04  
Fx: +31 36 532 25 48  
Vertex Cycle Systems



## NORWAY

Stians Sport A.S.  
Vollveien 13, Bygg D, POB 107  
1324 Lysaker  
Ph: +47 67 11 00 20  
Fx: +47 67 11 00 42

## POLAND

Harfa-Harryson  
Ul. Ks. Witolda 48  
50203 wroclaw  
Ph: +48 7 13 72 15 70  
Fx: +48 7 13 27 80 92

## PORTUGAL

Ciclo Coimbra  
Praça Manuel da Silva Reis, 122  
4400-211 Vila Nova de Gaia  
Ph: +351 22 379 44 61  
Fx: +351 22 375 61 63

## RUSSIA

Sportclub Triathlon

## SLOVAKIA

Excelia s.r.o.

## SLOVENIA & CROATIA

Proloco Trade d.o.o.  
Partizanska 4  
64000 Kranj  
Ph: +386 64 38 02 00  
Fx: +386 64 38 02 022

## SPAIN

Casa Masferrer  
Pol. Ind. Congost-Avda.  
San Julian, S/N Apdo Correos 89  
E-08400 Granollers  
Ph: +34 9 38 46 60 51  
Fx: +34 9 38 46 53 56

## SWEDEN

Vartex  
Batterivägen 14  
43232 Varberg  
Ph: +46 340 850 80  
Fx: +46 340 61 11 90

## SWITZERLAND

Intercycle  
Industriegebiet, Haldemattstr. 3  
6210 Sursee  
Ph: +41 41 92 66 511  
Fx: +41 41 92 66 352

Amsler & CO AG  
Lindenstraße 16  
8245 Feuerthalen  
Ph: +41 5 26 47 36 36  
Fx: +41 5 26 47 36 37

## U.K.

Raleigh P & A  
Triumph Road  
NG 72 DD Nottingham  
Ph: +44 115 9420202  
Fx: +44 115 9282044

Fisher Outdoor Leisure PLC  
Unit 2, Haslemore Business Centre  
Lincolnway off Lincoln Road  
EN 11 TE Enfield, Middx  
Ph: +44 181 8053088  
Fx: +44 181 8058821

Chickens & Sons  
Bisley Works/Landpark Lane  
LU 62 PP Kensworth, Beds  
Ph: +44 1582 873329  
Fx: +44 1582 873583

## AUSTRALIA

Groupe Sportif Pty. Ltd.  
20 Harker Street  
Burwood, Victoria 3125  
Ph: +61.3.9888.9882

Velo-Vita Pty. Ltd.  
Unit A, 602-612 Botany Road  
NSW 2015 Alexandria  
Ph: +61.2.9700.8177

## CANADA

Bell Sports Canada  
700 Chemin Bernard  
Granby, PQ, J2G 9H7  
Ph: +1 800.661.1662

Kempter Marketing  
1271 St Louis  
St Lazare, PQ, J7T 1Z9  
Ph: +1 514.424.4600

Norco Products Limited  
1465 Kebet Way  
Port Coquitlam, BC, V3C 6L3  
Ph: +1 800.663.8916

## ISRAEL

Hobby's LTD.  
POB 1231  
53111 Givataim  
Ph: +972 5 24 299 05  
Fx: +972 35 75 45 29

## JAPAN

Kawashima Cycle Supply Corp.  
No. 4-2-4 Kushiya-Cho Higashi  
Sakai, Osaka 590  
Ph: +81-722 381 557

Nichiniao Shokai Co., Ltd.  
6-16-8 Sotokanda Chiyoda-ku  
Tokyo 101  
Ph: +81-3 3382 6251

## NEW ZEALAND

Cycle Supplies  
PO Box 33051  
Christchurch  
Ph: +64.3.338.6803

H.S. White & Sons  
7C Anwen Place, East Tamacki  
PO Box 58331 Greymouth  
Auckland  
Ph: +64.9273.7690

## SOUTH AFRICA

Cape Cycle Systems (PTY) LTD.  
10/12 Argo Road, Wetton  
7780 Cape Town  
Ph: +27.21.761.3528

# SUPPORT WHO TO CALL / SRAM WARRANTY / SPARE PARTS



## WHO TO CALL

For fast SRAM dealer warranty and technical support help, please contact us at the appropriate locations.

## NORTH AMERICA

Dealer Helpdesk Number:

**(800)-346-2928**

## EUROPE

Please contact your local distributor.

## SRAM 2 YEAR WARRANTY

In addition to standard legal warranty entitlements, SRAM components include a two year full warranty beginning on the date of purchase. This warranty is subject to the following conditions:

1. During the warranty period, SRAM components with material or production defects which as a result adversely affect the proper functioning of such components, shall either be repaired or replaced with a functioning SRAM component free of charge, whereby we are free to determine whether repair or replacement should take place. If a component cannot be replaced or repaired, the purchaser shall receive, free of charge, a component of higher value from the current SRAM product line. Defective components which have been replaced become the sole property of SRAM.
2. Any other warranty claims not included in this statement are void. This especially includes any disassembly or assembly costs (for instance by the dealer), which shall not be covered by SRAM.
3. Warranty claims are only valid upon presentation of a proper proof of purchase.
4. Parts subject to normal wear and tear (for example brake sleeves, brake pads, chains etc.) and damage which is caused by improper use, specifically

caused by disregard for our assembly and operating instructions, shall not be covered by this warranty. Furthermore, this warranty shall not cover damages caused by the use of parts of different manufacturers or otherwise which are not compatible or suitable for use with SRAM components.

5. The servicing of a valid warranty claim shall neither extend this warranty nor establish a warranty period.
6. If a defect is discovered, please contact the dealer where the bicycle or the SRAM component in question was purchased.

## SPARE PARTS

You can find an extensive spare parts program in SRAM's Spare Parts List Model Year 2002 · Publ. Number 8502.

## SRAM ORIGINAL PARTS

Installation of parts and accessories not originally intended could result in less than optimal performance and/or injury.



[www.sram.com](http://www.sram.com)

### **WORLD HEADQUARTERS**

Chicago, Illinois U.S.A.  
SRAM Corporation  
1333 North Kingsbury, 4th floor  
Chicago, Illinois 60610  
phone: +1-312-664-8800  
fax: +1-312-664-8826

### **EUROPEAN HEADQUARTERS**

Amersfoort, The Netherlands  
SRAM Europe  
Basicweg 12D  
3821 BR Amersfoort  
The Netherlands  
phone: +31-33-450-6060  
fax: +31-33-457-0200

### **ASIAN HEADQUARTERS**

Taichung, Taiwan  
SRAM Taiwan  
No. 1598-8 Chung Shan Road  
Shen Kang Hsiang, Taichung  
County 429  
Taiwan R.O.C.  
phone: +886-4-2561-3678  
fax: +886-4-2561-3686



**SRAM**